



BrightEye™ 57

3G/HD/SD/Analog Test Signal and Sync Pulse Generator User Guide

ENSEMBLE

D E S I G N S

Revision 1.0 SW v1.0.1

Contents

PRODUCT OVERVIEW	5
Sync Generator and Test Signal Generator	5
3G Support	5
3G Signal Chain Options	5
Outputs	5
Customizable Test Patterns	5
Adjustments and Controls	5
Tri-Level Sync	6
Tone Generator Locked to Master Clock or External Reference	6
Configurable Tone Generator	6
Internal Timecode Generator	6
TIMECODE GENERATOR	7
Outputting Timecode	7
Table: Timecode Output Types and Output Connectors	8
Table: SDI Output Selections and Corresponding Timecode	9
FUNCTIONAL DESCRIPTION	10
External House Reference or Internal Precision Standard Reference	10
Temperature Compensated Oscillator	10
BLOCK DIAGRAM	10
APPLICATIONS	13
Analog, HD SDI and Audio Reference Outputs	13
Genlocked Test Signals	14
AUDIO GENERATION AND ROUTING	15
Audio Generators	15

Sixteen Independently Programmable Audio Channels	15
Audio Embedded in the SDI Outputs	15
Support for Analog and Digital Audio	15
REAR CONNECTORS	18
Power Connection	18
USB Connector	18
Audio Out	18
Balanced Analog Audio Connection	19
For Unbalanced Audio to a RCA Phono Input	19
AES 1/2 Out	19
TLS Out	19
SDI Out	19
SD Composite Out	19
Ref In (Reference In)	19
Programmable Outputs	20
MODULE CONFIGURATION AND CONTROL	21
Front Panel Controls and Indicators	21
Status Indicators	21
Adjusting Parameters from the Front Panel	22
USING THE BRIGHT EYE CONTROL APPLICATION	23
Selecting the Output Format (Format Menu)	24
Selecting the Video Test Pattern and Slate ID Parameters (Pattern Menu)	25
Configuring the SDI Out BNCs (SDI Out Menu)	27
Configuring the Composite Out BNCs (Cpst Out Menu)	28
Adjusting the Vertical and Horizontal Timing for Tri-Level Sync (TLS Menu)	29
Configuring the Audio Parameters (Audio Menu)	30

Setting the Timecode Parameters (Timecode Menu)	32
Setting the Output for Programmable Outputs Aux 1, Aux 2, Aux 3 (Aux Out Menu)	33
Configuring the Reference Mode, Composite Setup, Digital and Analog Reference Levels (Config Menu)	35
Monitoring SD Card Status and available RAM (Storage Menu)	36
TROUBLESHOOTING	37
No signal output	37
SOFTWARE UPDATING	38
WARRANTY AND FACTORY SERVICE	38
Warranty	38
Factory Service	38
SPECIFICATIONS	39
GLOSSARY	41

PRODUCT OVERVIEW

Sync Generator and Test Signal Generator

The BrightEye 57 is a genlockable sync generator and test signal generator that can be used as either a slave or master reference generator. It can lock to house reference or it can lock to its own internal precision standard. BrightEye 57 is well suited for remote trucks, post, helicopters and fly packs.

3G Support

The BrightEye 57's 3G test signals are useful for facilities that are installing 3 Gb/s routers and signal distribution. At twice the bit rate as HD SDI, 3G can transmit 1080p (50 or 59.94) and 4:4:4 RGB signals on a single cable. BrightEye 57 is compliant with SMPTE 424M and 425M and has support for both Level A and Level B. 3G Level A is used for uncompressed 1080p 50/60 signals, useful in broadcast and satellite. 3G Level B is used for uncompressed 1080i 4:4:4 and is useful in post production.

3G Signal Chain Options

For facilities and manufacturers using 3 Gb/s video, BrightEye units can be combined to form a complete 3G signal chain. The BrightEye 57 test signal generator's 3G output can be distributed through the BrightEye 43 3G distribution amplifier or the BrightEye 46 and BrightEye 48 E/O 3G fiber optical transmitter/receiver set. The BrightEye 72 provides a convenient way to monitor 3G signals with analog and HDMI outputs.

Outputs

1.5 Gb/s HD, 3 Gb/s HD or SD SDI test signals or black with embedded audio is output on the SDI BNCs. Composite, HD Tri-Level Sync and AES digital audio outputs are provided. There are three user-programmable outputs that are selectable between AES, LTC, Word clock or 6 Hz Pulse. Analog audio and AES outputs provide tone or silence.

Color Black, Bars, Crosshatch, Multi-burst, and SDI Checkfield (Pathogenic) are just some of the signals simultaneously available on the SDI and analog composite outputs. The Cyclops feature adds a motion element to the selected video test signal. An ID slate with user-programmable text can overlay the test pattern.

Customizable Test Patterns

In addition to the standard suite of test patterns, users can create custom test patterns on a computer. Simply transfer test patterns to the included Secure Digital flash memory card and then insert the memory card into the front of the BrightEye 57. Test patterns can include motion and an associated audio clip such as voice-over or station ID.

Note: Use Ensemble Design's *Pattern Generator* software application when creating custom test patterns for the BrightEye 57.

Adjustments and Controls

Many controls can be adjusted through the intuitive front panel. BrightEye Mac and BrightEye PC software provide a complete user interface for all adjustments and controls.

Tri-Level Sync

Tri-Level Sync offers improved timing accuracy over traditional Bi-Level Sync. The analog output of a standard sync generator is Bi-Level Sync. The timing reference is the 50% point of the leading edge. The relative timing of this point shifts with changes in gain, DC reference, and frequency response.

The timing reference in Tri-Level Sync is also at the 50% point of the sync pulse, but because this pulse has both the positive and negative excursions, this point is the same as the DC ground reference. This symmetry makes the signal virtually immune to time shift from gain, DC and response errors. The zero point never drifts. The zero crossing is easy to detect every time which ensures timing accuracy.

The HD Tri-Level Sync Generator block is configured in the BrightEye Control application to one of four HD formats (1080i, 1080p, 720p, or 1080sF). The Tri-Level Sync output frame rate can be selected between 23.98/50/59.94, the most commonly used family of frame rates, and 24/30/60, reserved for use with special applications such as film.

The BrightEye 57 will apply the selected TLS frame rates to specific formats and line rates as shown in the table below.

Frame Rate	23.98/50/59.94 Hz		24/30/60 Hz	
Line Rate	NTSC	PAL	NTSC	PAL
1080i	59.94	50	60	50
720p	59.94	50	60	50
1080p	23.98	25	24	25
1080sF	23.98	25	24	25

Tone Generator Locked to Master Clock or External Reference

The Tone Generator is also locked to the master clock or the external reference, so the 48 kHz AES output will be synchronous to the video outputs. In NTSC there are exactly 8008 audio samples in every five video frames. There will be exactly 1920 audio samples in every PAL video frame.

Configurable Tone Generator

The Tone Generator can be configured for silence, a continuous tone, or an interrupted tone which is coordinated with the Cyclops moving element. The Tone Generator feeds the Analog Audio outputs through a precision digital-to-analog converter. It feeds an AES formatter to produce a standard AES output. And finally, it is fed to an embedder (audio inserter) so that it will also be a part of the SDI outputs.

Internal Timecode Generator

The internal Timecode Generator feeds DVITC on the SDI outputs and VITC on the composite outputs. Timecode can also be selected in LTC form on the programmable Aux 1, Aux 2, and Aux 3 outputs.

TIMECODE GENERATOR

The output of the BrightEye 57's Timecode Generator is available simultaneously in multiple output types through multiple output connectors as shown in the **Timecode Output Types and Output Connectors** table on the next page.

The Timecode Generator will always run at the same frame rate as the main SDI outputs. If that output is in the NTSC family (29.97 or 59.94), you can configure for the choice of Drop Frame or non-Drop Frame operation. Drop Frame is necessary if you want the timecode value to track the actual time of day. By dropping specific frames, it makes up for the fact that the frame rate is just shy (by 1/1.001) of 60 Hz.

You can load the Timecode Generator with a preset value through the control system. When a BrightEye 57 powers up, the Timecode Generator starts at 0:0:0:0. Alternatively, the BrightEye 57 can read VITC present on the reference input. This timecode value will be used continuously by the BrightEye 57's internal generator. When this option is selected, the timecode presented on the many different outputs will all match the timecode on the reference input.

Outputting Timecode

The BrightEye 57 has one timecode generator. The timecode that it produces can be output through a number of methods:

1. Routing LTC (linear timecode) to one of the Programmable Output BNCs (Aux 1, Aux 2, Aux 3). This is an analog, unbalanced, single-ended 1V P-P signal at 75 Ohm impedance.
2. Routing LTC to the Analog Audio Output connector. This will be exactly the same signal as when it is routed to a BNC, but it will be a differential (balanced) twisted pair analog signal coming out of the green Phoenix connector on the rear of the unit. Choose Timecode LTC on one of the 16 audio channel selectors, then route that audio to the Analog Audio Output connector.
3. Routing LTC as an audio channel in an AES bitstream. Choose Timecode LTC on one of the audio channel selectors, then select AES on any of the Programmable Outputs (Aux 1, Aux 2, Aux 3). There are 9 different AES choices which correspond to channel pairs 1/2, 3/4, 5/6, etc, and the choice of AES Silence. Choose the appropriate audio pair so that the particular AES stream being fed to an output includes the timecode signal.
4. Routing LTC as one of the audio signals embedded in the SDI Output stream.
5. Routing VITC (vertical interval timecode) on an analog composite output.
6. Routing DVITC (digital vertical interval timecode) on an SD SDI output.
7. Routing ATC (ancillary timecode) on an HD SDI output.

You can output an analog timecode signal with any of the methods described above. The difference between them is a choice between balanced or unbalanced. If you need to feed timecode to a device with an XLR input, you would generally want to use the balanced output. However, it is also possible to use the unbalanced output through Programmable Outputs (Aux 1, Aux 2, Aux 3) and connect it to the destination with a balancing transformer. This would be much like the DATS adaptors for AES.

The advantage of using the unbalanced output through the Programmable Outputs (Aux 1, Aux 2, Aux 3) is that you can run it through a BrightEye 41 Distribution Amplifier to make more copies.

Table: Timecode Output Types and Output Connectors

Timecode Output Type	Output Connectors
LTC (Linear or Longitudinal Timecode) single-ended Note: <i>An LTC signal is a very low data rate bit stream that fits within the bandwidth of an analog audio signal.</i>	Aux 1, Aux 2, Aux 3
LTC balanced	One of the two Analog Audio Outputs (Channel 1 or Channel 2)
LTC embedded in an audio channel	One of the 16 audio channels in the SDI Out (either SD or HD)
VITC (Vertical Interval Timecode)	<p>The vertical interval of the Analog Composite Out. Outputs can be Black or any test signal.</p> <p>SDI Out when it is SD. This is a digitized version of the VITC that would be in an analog composite signal.</p> <p>VITC can be assigned to any of the following line pairs:</p> <ul style="list-style-type: none"> • Lines 13, 15 • Lines 14, 16 • Lines 15, 17 • Lines 16, 18 • Lines 17, 19 • Lines 18, 20
DVITC (Digital Vertical Interval Timecode)	<p>The vertical interval of the SDI Out when it is SD. Outputs can be Black or any test signal.</p> <p>SDI Out when it is HD. Can have DVITC packets carried in the ancillary data spaces.</p> <p>DVITC can be assigned to any of the following line pairs:</p> <ul style="list-style-type: none"> • Lines 13, 15 • Lines 14, 16 • Lines 15, 17 • Lines 16, 18 • Lines 17, 19 • Lines 18, 20
ATC (Ancilliary Timecode)	<p>The vertical interval when the output is HD SDI. SDI outputs can be Black or any test signal.</p> <p>There is no concept of line assignment for the ATC packet.</p>

Table: SDI Output Selections and Corresponding Timecode

SDI Output	TC Frame Rate	VITC on SD Output	Drop
720p/59.94	The current SMPTE spec (SMPTE-12M) does not allow >30Hz framerate		
1080i/59.94	29.97 Frames/second	yes	On or Off
1080i/50	25 Frames/second	yes	N/A
1080sF/23.98	23.98 Frames/second	no	On or Off
1080sF/24	24 Frames/second	no	N/A
SD 525	29.97 Frames/second	yes	On or Off
SD 625	25 Frames/second	yes	N/A

FUNCTIONAL DESCRIPTION

External House Reference or Internal Precision Standard Reference

The BrightEye 57 can lock to an external house reference or it can lock to its own internal precision standard reference.

The Ref In BNC on the rear of the unit will accept 1 V P-P PAL, NTSC, 10 MHz or HD Tri-Level Sync as a reference. The outputs will all be synchronous relative to this reference. The overall vertical and horizontal timing of the outputs can be adjusted in the BrightEye PC or Mac Timing menu. Reference status is reported on the front of the unit and in BrightEye PC or Mac. The Composite video output will have the same ScH phase (or color framing) as the external reference.


A special case exists when simultaneously using PAL and NTSC. If the output standard for the module is PAL and an NTSC reference is connected, BrightEye 57 will lock to the reference at the fundamental clock frequency common to PAL and NTSC. This is referred to as “clock-locked”. There is no horizontal and vertical relationship but BrightEye 57 will have the same frequency accuracy as the reference and the AES audio output will be synchronous simultaneously to the BrightEye 57 PAL output and the NTSC reference. The same case is true for an NTSC standard with a PAL reference.

Temperature Compensated Oscillator


When no external reference is connected to the unit, the fundamental clock source for BrightEye 57 is taken from a temperature compensated oscillator which guarantees frequency accuracy to within 1 cycle of subcarrier (better than 0.2 ppm) across the full operating temperature range. In addition, because it does not require a crystal oven, BrightEye 57 is accurate immediately upon power up. This ensures that the BrightEye 57 outputs meet the most stringent standards.

BLOCK DIAGRAM

Please see the functional block diagram on the following two pages. It appears twice, first in a portrait view, then larger as a landscape view.

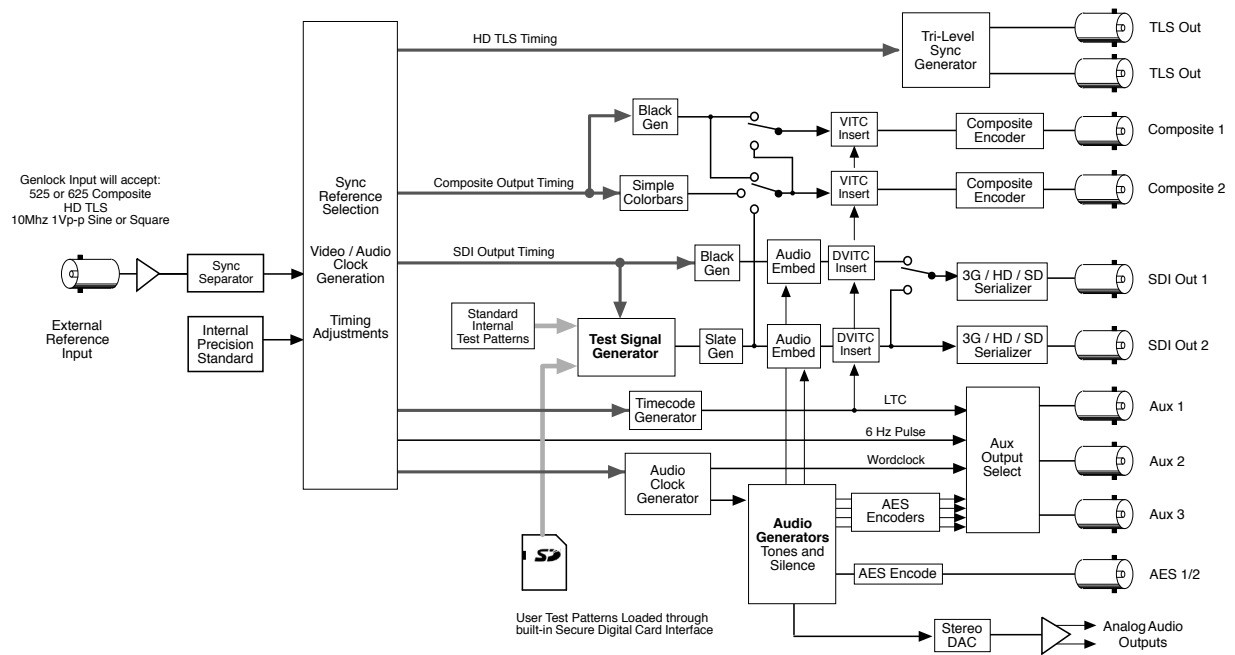

BrightEye 57 Functional Block Diagram, Portrait View

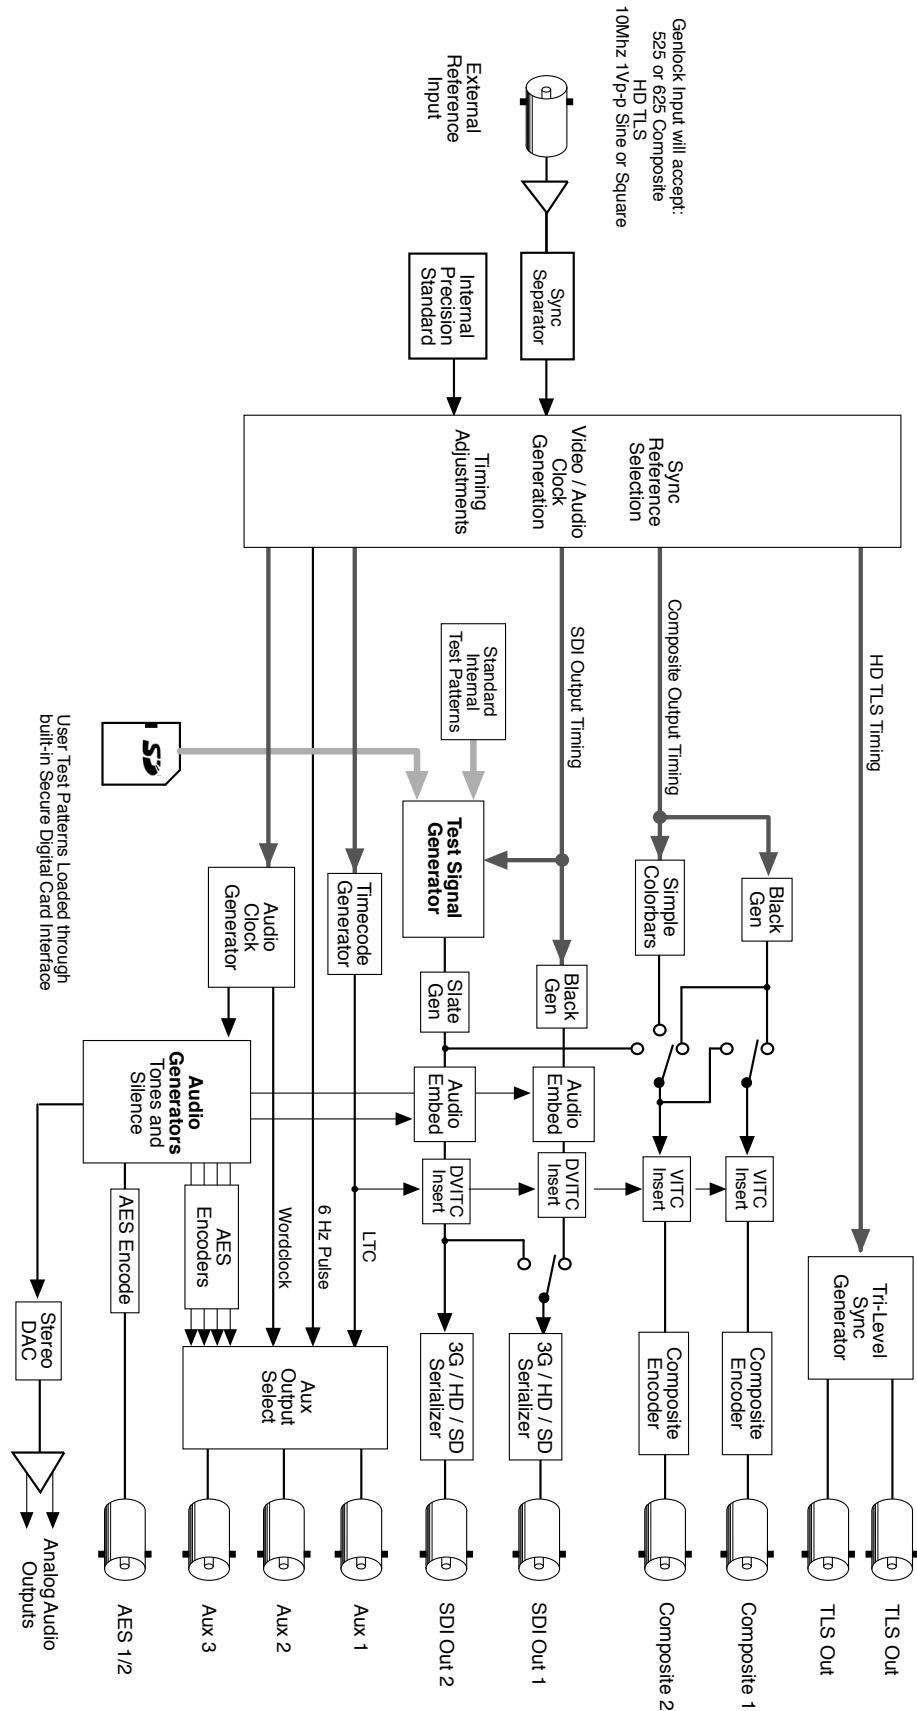


BrightEye 57 Functional Block Diagram, Landscape View

APPLICATIONS

BrightEye 57's complete feature set makes it a versatile genlock sync and test signal generator. Its small size also makes it an excellent choice for use in mobile applications. Two examples of BrightEye 57 applications are given below.

Analog, HD SDI and Audio Reference Outputs

In the example below, the BrightEye 57 is providing analog, HD SDI and audio reference outputs. A BrightEye 41 distributes copies of the composite signal output. BrightEye 57 can provide all the reference signals needed for post, mobile or broadcast application.

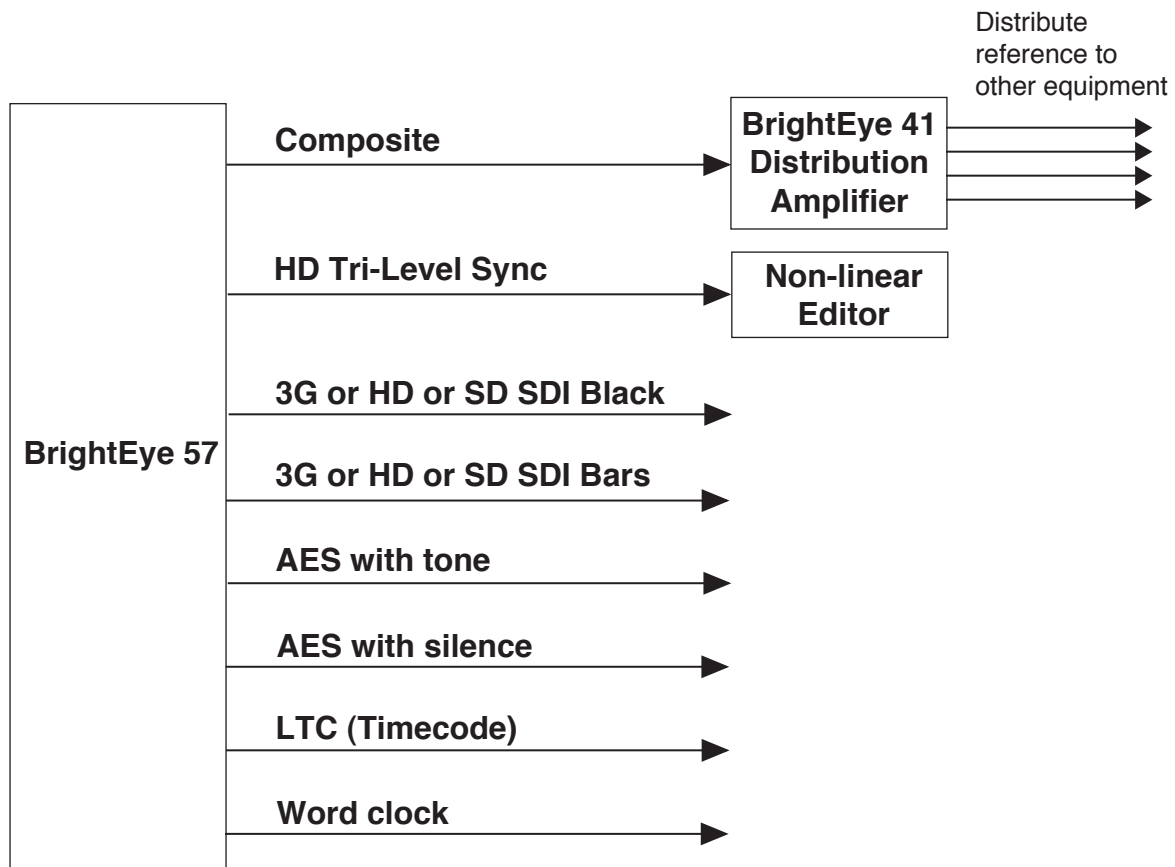


BrightEye 57 providing analog, HD SDI and audio reference outputs

Genlocked Test Signals

BrightEye 57 can be used to provide bars and other test signals to facility devices timed to the same house reference. A number of test signals can be fed to a router, switcher, and other devices in a facility where genlocked timing is important.

As shown in the example below, a BrightEye 57 is fed with the house reference to the Ref In BNC. The audio tone can be embedded into the SDI timed test signal output and fed to an HD or SD SDI router and switcher. This allows each of the test signals to be in time with the signals fed to the other devices.

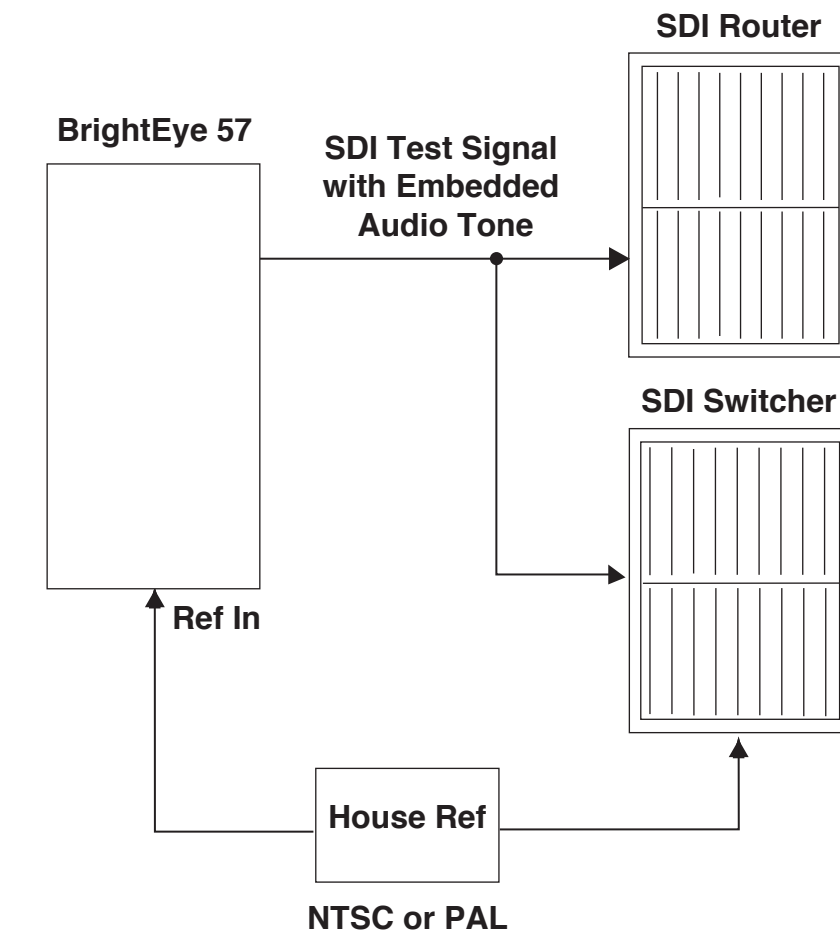

BrightEye 57 Genlocked Test Signal Application

AUDIO GENERATION AND ROUTING

Audio Generators

The diagram shown on the following two pages depicts the audio signal generation and routing for the BrightEye 57. It appears twice, first in a portrait view, then larger as a landscape view.

Audio can be output as follows:

- Analog audio (one stereo pair)
- AES digital audio (BNC)
- Digital audio embedded in the SD SDI and/or HD SDI video outputs

Sixteen Independently Programmable Audio Channels


The BrightEye 57 supports sixteen audio channels and the content of each channel is independently programmable. Choices include adjustable frequency tone generators, tone sweeps, silence, timecode, audio clip playback from the BrightEye 57's secure digital card, and the external AES input. Left/right channel ID that synchronizes to the cyclops feature can also be selected.

Audio Embedded in the SDI Outputs


All sixteen of these channels can be embedded in the SDI outputs. Each AES output can select from any of the eight pairs that make up these sixteen channels. Similarly, the stereo analog output can be driven from any of these audio signal pairs.

Support for Analog and Digital Audio

The AES digital audio outputs are always synchronous with all of the video outputs – regardless of format – because all of the video outputs can be locked to a common time base. Multiple tone generators can be used to identify multi-channel content. Analog audio is output as one stereo pair or as two mono channels.

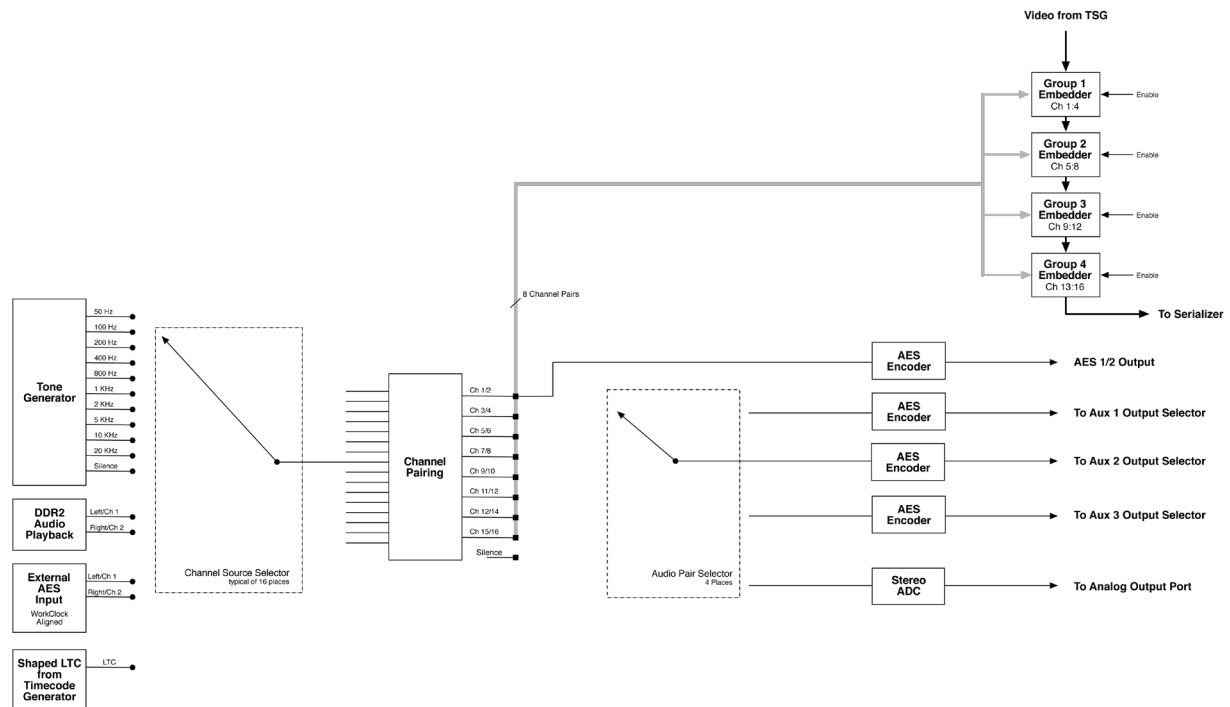


BrightEye 57 Audio Generation and Routing Functional Diagram, Portrait View

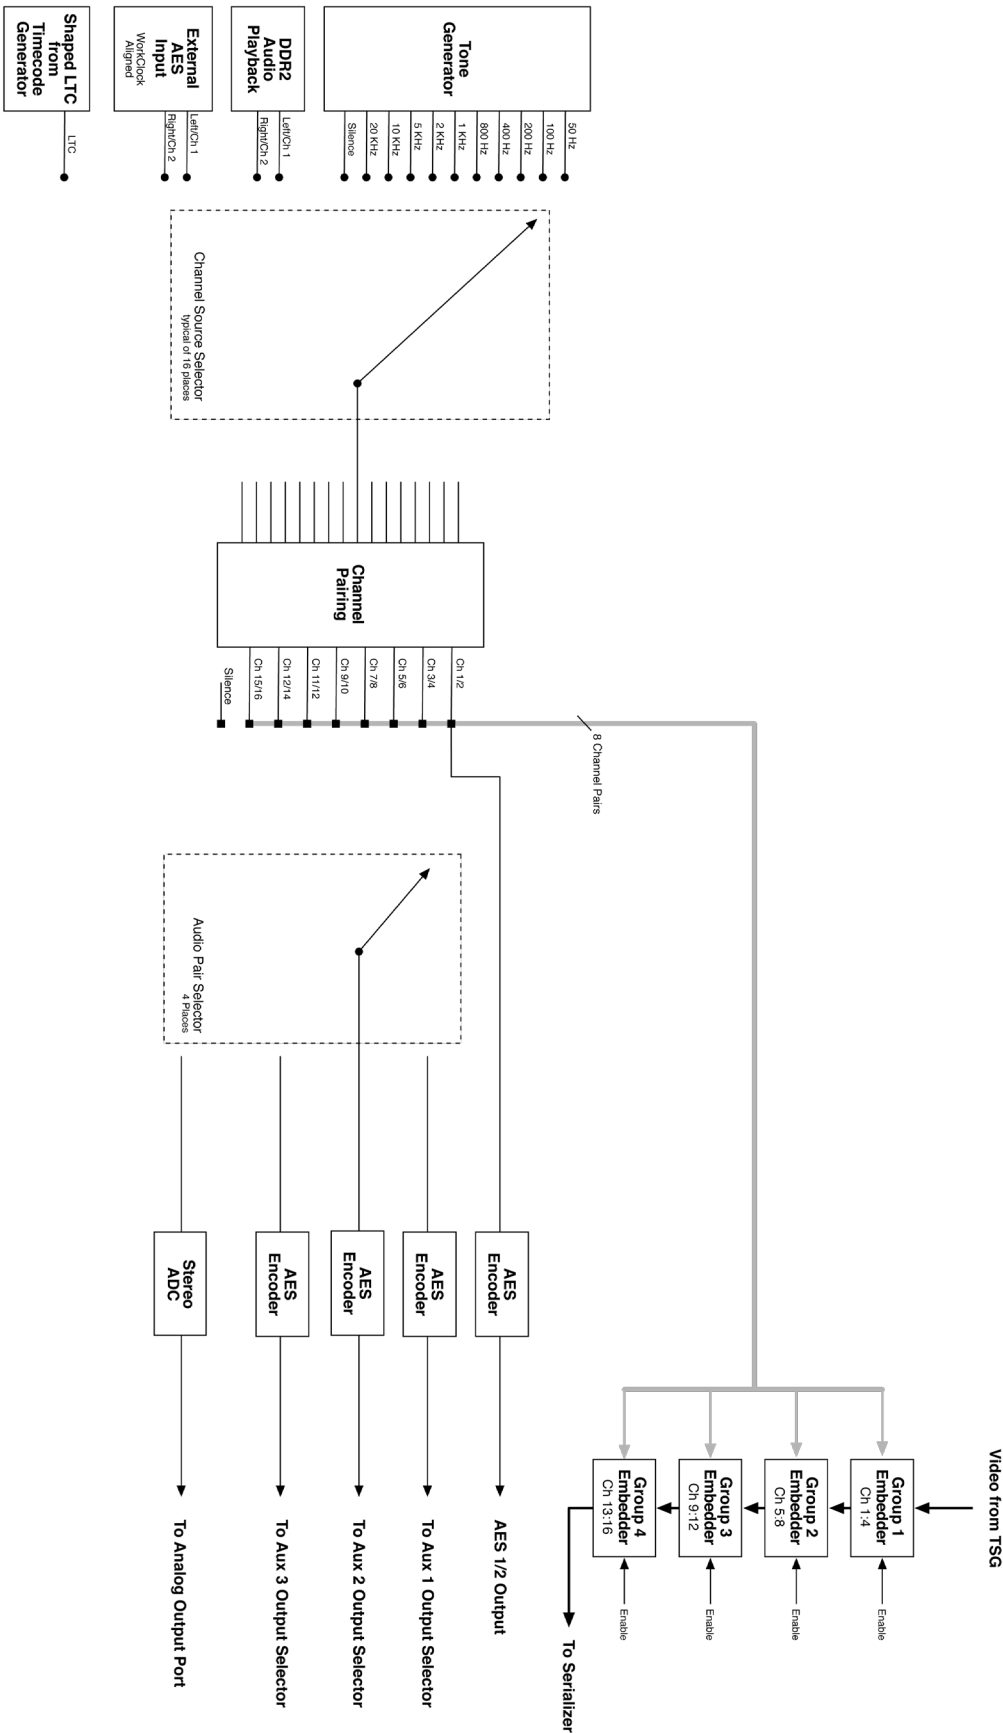

BrightEye 57 Audio Generation and Routing Functional Diagram, Landscape View

REAR CONNECTORS

All connections to the BrightEye 57 are made on the rear of the unit. Refer to the illustration below.

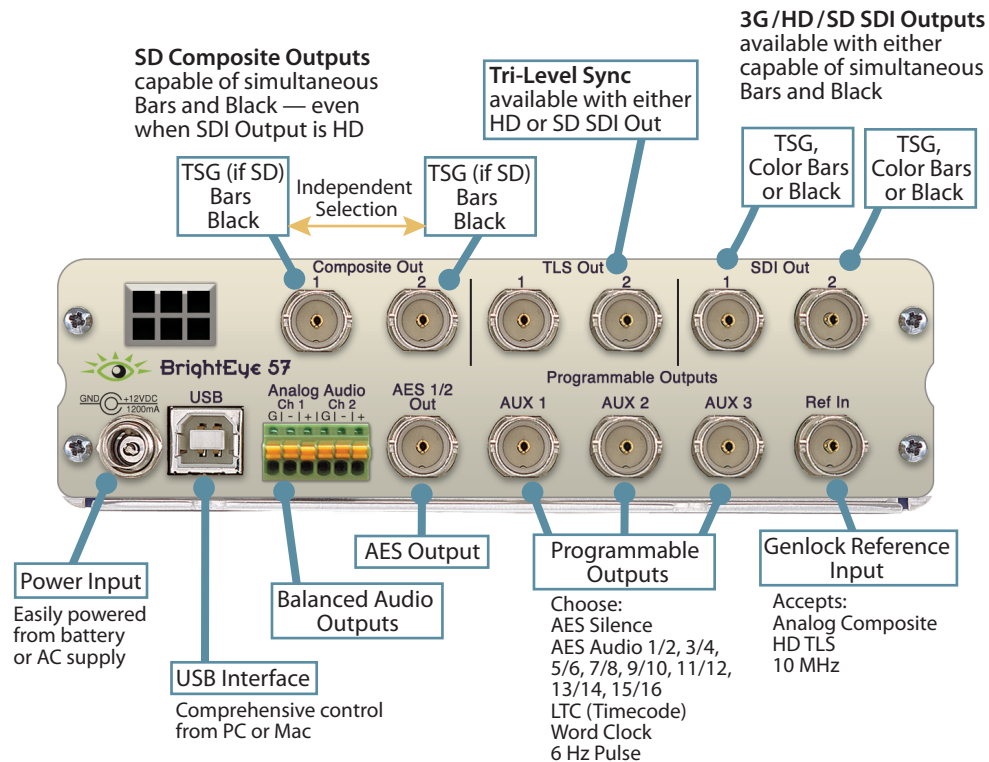

Power Connection

Connect a modular power supply to the 12 volt DC power input connection on the far left of the unit. Use the locking ring to secure it. Make sure you are using a power supply that provides at least 12V at 1.5A.

USB Connector

The USB connector is used to provide more comprehensive control, diagnostics, and upgrades to the unit from a PC or Mac. Use the BrightEye Control application included on CD-ROM to make adjustments as described in the Operation section of this user guide.

Audio Out

The Audio Out provides two channels of an analog audio reference tone. Wiring is done by inserting a 6 pin connector provided with the unit. Analog reference levels can be configured from the BrightEye Control application.

To connect audio to this connector type, strip the audio wire to about 3/8" (8 mm). Solder tinning is not required. Push the wire into the opening at the bottom of the connector to seat the connection. This will snap the wire into place.

To remove the wire, push in the pin above the connection with a small pointed tool. This will release the wire from the connector.

Balanced Analog Audio Connection

To connect the audio output to an audio XLR connector, connect the pins as follows:

- Attach Ground from Pin 1 of the Audio Out to Pin 1 of the XLR.
- Attach the + (plus) signal from Pin 2 of the Audio Out to Pin 2 of the XLR.
- Attach the – (minus) signal from Pin 3 of the Audio Out to Pin 3 of the XLR.

For Unbalanced Audio to a RCA Phono Input

To connect the audio output to a consumer audio connector such as an RCA phono jack, connect the pins as follows:

- Attach Ground from Pin 1 of the Audio Out to the shell, Shield or Ground of the RCA Phono jack.
- Attach the + (plus) signal from Pin 2 of the Audio Out to the center pin of the RCA Phono jack.
- The – (minus) signal is not used in this application.

AES 1/2 Out

The AES 1/2 Out is a BNC connector that provides a digital audio output in the AES format. The AES Output can be configured from the front panel and from the BrightEye Control application.

TLS Out

The Tri-Level Sync Out is an output BNC connector that supplies HD or SD SDI Tri-Level Sync in a number of user-selected formats. Use either the front panel or the BrightEye Control application to select the desired format.

SDI Out

The SDI Out is a BNC connector that provides test patterns or black in serial digital component format. Test patterns and video standard can be selected from the front panel as well as from the BrightEye Control application. The AES audio test signals can be embedded in this signal using the BrightEye Control application. The SDI Out can deliver 270 Mb/s SD Serial Digital, 1.485 Gb/s HD Serial Digital, and 2.97 Gb/s HD Serial Digital.

SD Composite Out

The SD Composite Out 1 and 2 are BNC connectors that present either an NTSC or PAL composite output. These outputs provide the same test patterns as SDI Out, only in composite format. The test patterns can be selected from the front panel and from the BrightEye Control application.

Ref In (Reference In)

The Ref In BNC accepts 1 V P-P PAL, NTSC, 10 MHz or HD Tri-Level Sync reference input to provide an overall genlock timing reference for the unit.

Programmable Outputs


The Programmable Outputs (Aux 1, Aux 2 and Aux 3) BNCs are programmable outputs that can deliver LTC (Timecode), AES Audio 1/2, 3/4, 5/6, 7/8, 9/10, 11/12, 13/14, 15/16, AES Silence, Word Clock or 6 Hz Pulse.

MODULE CONFIGURATION AND CONTROL

Control and operation of the BrightEye 57 is performed from the front panel and with the BrightEye Control application. Some control settings and parameter choices are available only with BrightEye PC or Mac. These parameters cannot be monitored from the front panel.

Front Panel Controls and Indicators

The front panel shown in the figure below provides status indicators and control over video and audio output.

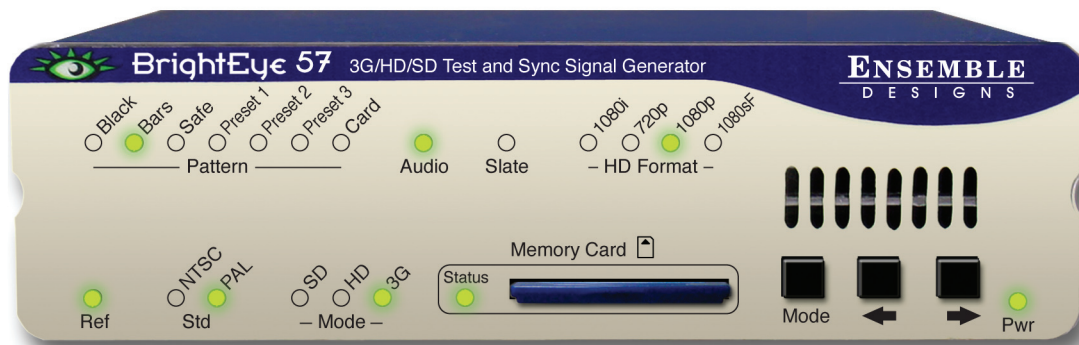

Status Indicators

The following status indicators are provided on the front panel:

Pattern

The currently selected video pattern will illuminate green. Choices include:

Black, Bars (choices include 75% Full Bars, 100% Full Bars, 75% Split Bars, 100% Split Bars, SMPTE Bars), Safe (Safe Title), Preset 1, Preset 2, Preset 3, or Card.

“Preset” refers to menu selections available in the Pattern menu in the BrightEye Control application. Each of the Preset fields (Preset 1, Preset 2, Preset 3) have fifteen pattern types available to select in the Pattern menu.

“Card” refers to a test pattern stored on a Secure Digital Memory Card. If the Card green light is illuminated, it indicates that you have inserted an SD Memory Card into the card slot in the front of the BrightEye 57 and selected “User Card” from the Pattern Sel field in the Pattern menu.

Audio

Illuminates green when the option is selected to embed Audio.

Slate

Illuminates green when the signal identification slate is enabled. To change the Slate Text ID, use the ID, ID Mode, and Slate Text fields in the Pattern menu in the BrightEye Control application.

HD Format

The currently selected HD Format (1080i, 720p, 1080p, or 1080sF) is illuminated green. The Tri-Level Sync (TLS) frame rate is determined by the selections made in the Standard, Mode and HD Format fields in the Format menu of the BrightEye Control application.

Ref (Reference)

The status indicator will be green when a valid reference is present and locked.

Std (Standard)

The currently selected output standard (NTSC or PAL) will illuminate green.

Mode

The currently selected mode (SD, HD, 3G) Illuminates green.

Memory Card Status

Illuminates green when a Secure Digital (SD) flash memory card is correctly inserted into the SD card slot.

Pwr (Power)

Illuminates green when the BrightEye unit has power and the internal voltage regulator is functioning correctly.

Adjusting Parameters from the Front Panel

Use the **Mode**, **Right Arrow**, and **Left Arrow** buttons to select and adjust parameters from the front panel.

Pressing the **Mode** button activates the front panel for editing and tabs between each section of editable parameters.

Pressing the **Right Arrow** or **Left Arrow** advances the selection within a given section of parameters, or increases (**Right Arrow**) or decreases (**Left Arrow**) the value of a selected parameter.

NOTE: The LED of an edited parameter will blink for 15 seconds, after which time its value is stored in memory. If power is interrupted before this 15 second timeout period has elapsed, the edited state will not be saved.

USING THE BRIGHT EYE CONTROL APPLICATION

The BrightEye PC and BrightEye Mac applications included on CD-ROM are designed to allow you to configure and control the BrightEye 57 from a personal computer. Instructions for installing and using this software application are given in the PDF manual on the CD-ROM.


If the BrightEye 57 is connected to a computer running this software, the following menus are available for controlling and monitoring the unit:

Selecting the Output Format (Format Menu)

To select the output format of the **Test Signal and Sync Pulse Generator**, select the **Format** menu shown below. Use the drop-down menus to set the parameters for the **Standard**, **Mode**, and **HD Format** fields.

- **Standard** – select the output standard you want to use. Choices are: NTSC, PAL
- **Mode** – select the mode you want to use. Choices are: SD, HD, 3G
- **HD Format** – select the HD Format. Choices are: 1080i, 720p, 1080p, 1080sF

The remaining fields, **SDI Format**, **Cpst Format**, and **TLS Format**, are status indicators. They are not editable. They reflect the format selections made in the **Standard**, **Mode** and **HD Format** menus.

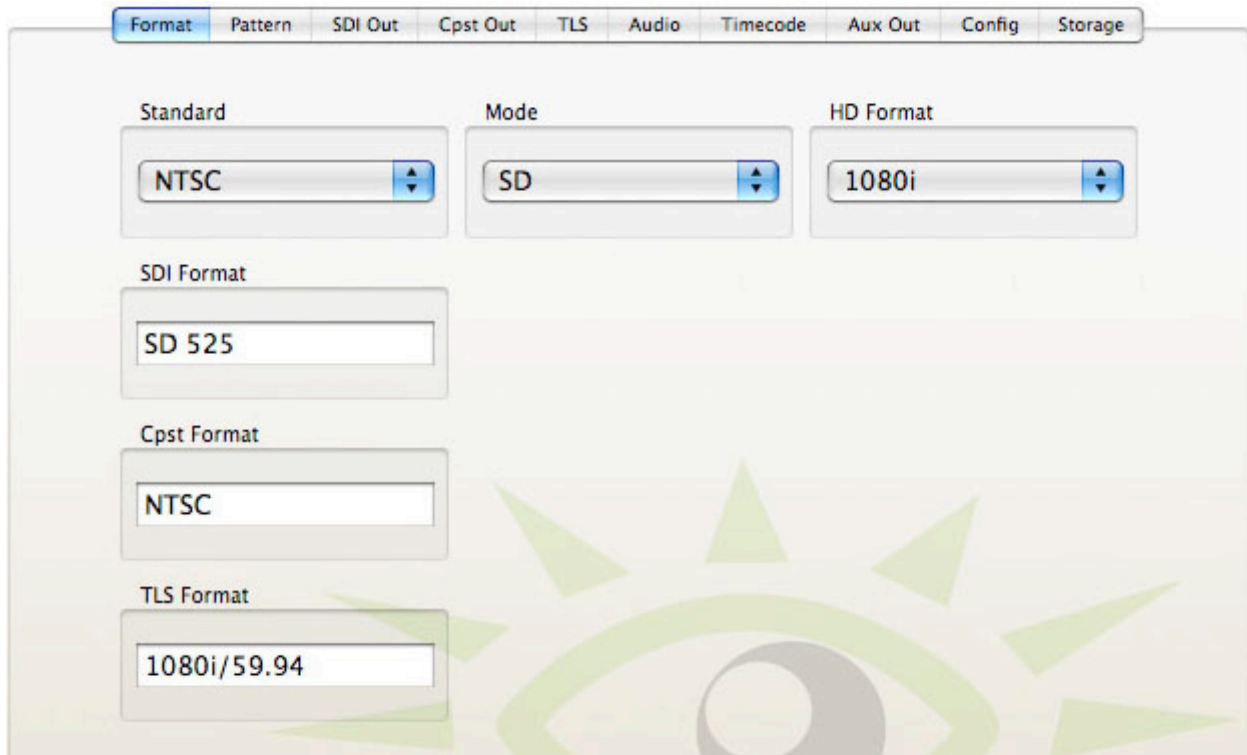

The screenshot shows the 'Format' menu of the software. At the top is a tabbed interface with tabs for 'Format', 'Pattern', 'SDI Out', 'Cpst Out', 'TLS', 'Audio', 'Timecode', 'Aux Out', 'Config', and 'Storage'. The 'Format' tab is selected. Below the tabs are three main sections: 'Standard', 'Mode', and 'HD Format'. Each section has a drop-down menu. The 'Standard' menu is set to 'NTSC'. The 'Mode' menu is set to 'SD'. The 'HD Format' menu is set to '1080i'. Below these are four status indicator fields: 'SDI Format' showing 'SD 525', 'Cpst Format' showing 'NTSC', and 'TLS Format' showing '1080i/59.94'. A large, faint green eye logo is visible in the background of the lower half of the window.

Selecting the Video Test Pattern and Slate ID Parameters (Pattern Menu)

To select the video test pattern, select the **Pattern** menu shown below. Use the drop-down menus to set the parameters for the **Pattern Sel**, **Preset 1**, **Preset 2**, and **Preset 3** fields. Or select a test pattern stored on a Secure Digital Memory Card. Enable or disable the Y, Cr and Cb Channels. Determine the Slate ID parameters.

- **Pattern Sel** – select the video test pattern for output from the drop-down menu. Choices are: Black, Flat Field 20, Flat Field 80, 75% Full Bars, 100% Full Bars, 75% Split Bars, 100% Split Bars, SMPTE Bars, Safe Title, Crosshatch, Preset 1, Preset 2, Preset 3, User Card.
- **Preset 1, Preset 2, Preset 3** – select the video test pattern for the Preset fields. The value for each Preset field can be selected independently from their respective drop-down menus. To use one of the Preset test patterns, select from each Preset drop-down menu: Flat Field 50, White, Red Field Bars, Video Ramp, Data Ramp, Shallow Ramp, 5 Step, Sweep, MultiBurst, Full Field Window, Component Window, Digital Blanking, Cosite, Interlace, Pathological.
- **User Ptn Sel** – use the up and down arrows on this control to select a custom video test pattern stored on the Secure Digital Memory Card if one has been inserted into the Memory Card slot on the front of the BrightEye 57. Each number corresponds to one of the video test patterns on the card. (See the Test Pattern Generator software application and user manual for details on preparing test patterns for use with the BrightEye 57).
- **Ptn Name** – when there is an SD Memory Card loaded, the **Ptn Name** field displays the name of the custom video test pattern selected from the **User Ptn Sel** field. When there is no Secure Digital Memory Card loaded, the **Ptn Name** field displays “None Loaded.”
- **Y Channel, Cr Channel, Cb Channel** – use each of the three check box fields to enable or disable each channel independently. This is useful for setting up monitors or trouble-shooting.
- **ID** – On or Off. When On, it means that the Slate Text ID displays on screen over the top of the selected video test pattern. When Off, the Slate Text ID will not display.
- **ID Mode** – select one of three modes: Slate Only, Cyclops Only, or Slate Cyclops. Slate Only means that only the Slate Text ID will display over the selected video test pattern. Cyclops Only means that Cyclops will display over the selected video test pattern. (Cyclops adds a moving element to the test signal in order to assist in checking that a particular signal path is live.) Slate Cyclops means that both the Slate Text ID and Cyclops will display on screen over the top of the selected video test pattern.
- **Slate Text** – enter the Slate Text ID to be displayed on screen. This is useful for identifying a location or destination; for example, Truck 1, News 2, Studio A, Helicopter 4, etc.

Format Pattern SDI Out Cpst Out TLS Audio Timecode Aux Out Config Storage

Pattern Sel
SMPTE Bars

Preset 1
Sweep

Preset 2
Full Field Window

Preset 3
Pathological

User Ptn Sel
1

Ptn Name
None Loaded

Y Channel
☒ enabled

Cr Channel
☒ enabled

Cb Channel
☒ enabled

ID
On


ID Mode
Slate Only

Slate Text
BrightEye 57 TSG

Configuring the SDI Out BNCs (SDI Out Menu)

From the SDI Out menu, you can select a value for the SDI video outputs (SDI Out 1 and SDI Out 2). Vertical and Horizontal Timing adjustments are provided for timing the outputs with respect to the reference input.


- **SDI Format** – reports which HD or SD format has been selected for the SDI Output BNCs. To change the format, use the **Format** menu described earlier.
- **SDI 1 OutSel** – select from these values: TSG, Black, or Color Bars for the SDI BNC video outputs.
- **SDI 2 OutSel** – select from these values: TSG, Black, or Color Bars for the SDI BNC video outputs.
- **Vert Timing** – Set the vertical timing in lines. Use the slider controls or arrows to select a value or enter a value directly into the number field.
- **Hor Timing** – Set the horizontal timing in clocks. Use the slider controls or arrows to select a value or enter a value directly into the number field.

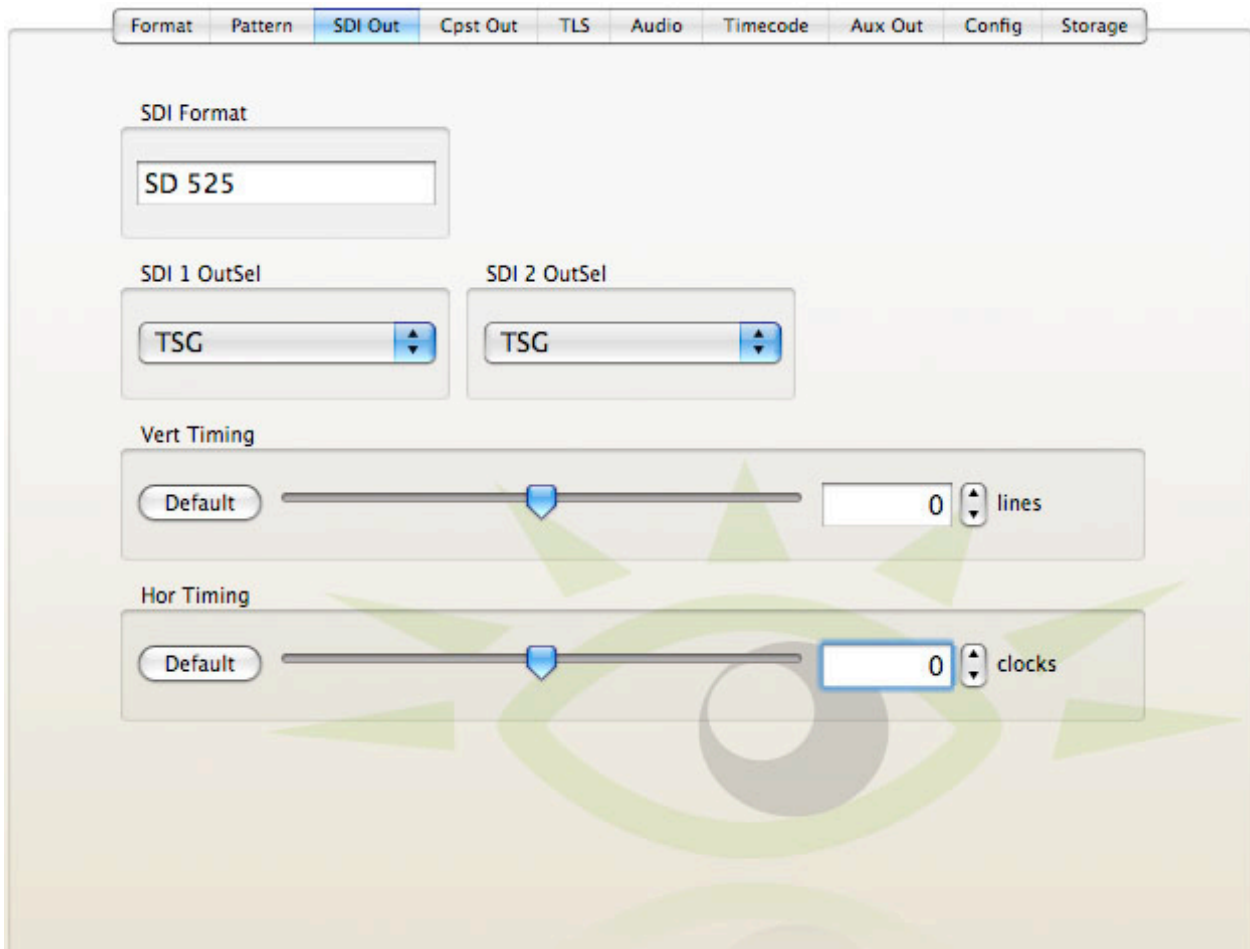

Configuring the Composite Out BNCs (Cpst Out Menu)

From the Cpst Out menu, you can select a value for the Cpst video outputs (Composite Out 1 and Composite Out 2). Vertical Timing, Horizontal Timing and Fine Phase adjustments are provided for timing the outputs with respect to the reference input.

- **Cpst Format** – reports what format has been selected for the Composite BNC Output. To change the format, use the **Format** menu described earlier.
- **Cpst 1 OutSel** – select from these values: Black, Color Bars, or Follow SDI Out for the Composite Out BNC video outputs.
- **Cpst 2 OutSel** – select from these values: Black, Color Bars, or Follow SDI Out for the Composite Out BNC video outputs.
- **Vert Timing** – Set the vertical timing in lines. Use the slider controls or arrows to select a value or enter a value directly into the number field.
- **Hor Timing** – Set the horizontal timing in clocks. Use the slider controls or arrows to select a value or enter a value directly into the number field.
- **Fine Phase** – Set the fine phase in nanoseconds (nsec). Use the slider controls or arrows to select a value or enter a value directly into the number field.

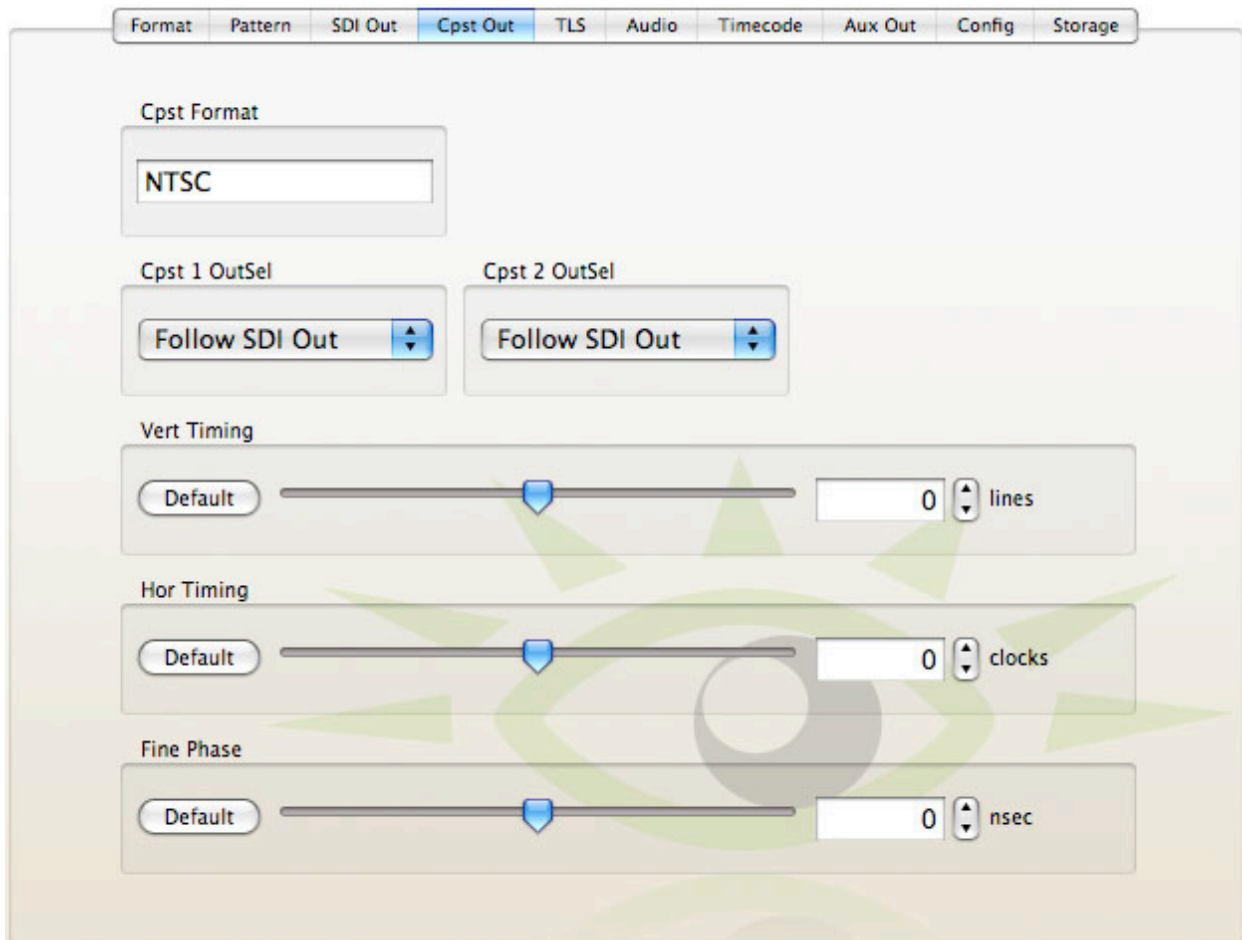


The screenshot shows the 'Cpst Out' menu in the BrightEye 57 software. The menu is part of a larger interface with tabs for Format, Pattern, SDI Out, Cpst Out (selected), TLS, Audio, Timecode, Aux Out, Config, and Storage. The Cpst Out menu contains the following settings:

- Cpst Format**: A text field displaying 'NTSC'.
- Cpst 1 OutSel**: A dropdown menu showing 'Follow SDI Out'.
- Cpst 2 OutSel**: A dropdown menu showing 'Follow SDI Out'.
- Vert Timing**: A slider control with a 'Default' button, a blue arrow indicator, and a numeric field showing '0' with a unit of 'lines'.
- Hor Timing**: A slider control with a 'Default' button, a blue arrow indicator, and a numeric field showing '0' with a unit of 'clocks'.
- Fine Phase**: A slider control with a 'Default' button, a blue arrow indicator, and a numeric field showing '0' with a unit of 'nsec'.

Adjusting the Vertical and Horizontal Timing for Tri-Level Sync (TLS Menu)

From the TLS menu, you can adjust the Vertical and Horizontal Timing of the Tri-Level Sync with respect to the reference input.

- **TLS Format** – Mirrors the TLS Format field in the Format menu. Reports the TLS format that has been selected from the **Format** menu described earlier.
- **Vert Timing** – Set the vertical timing in lines. Use the slider controls or arrows to select a value or enter a value directly into the number field.
- **Hor Timing** – Set the horizontal timing in clocks. Use the slider controls or arrows to select a value or enter a value directly into the number field.

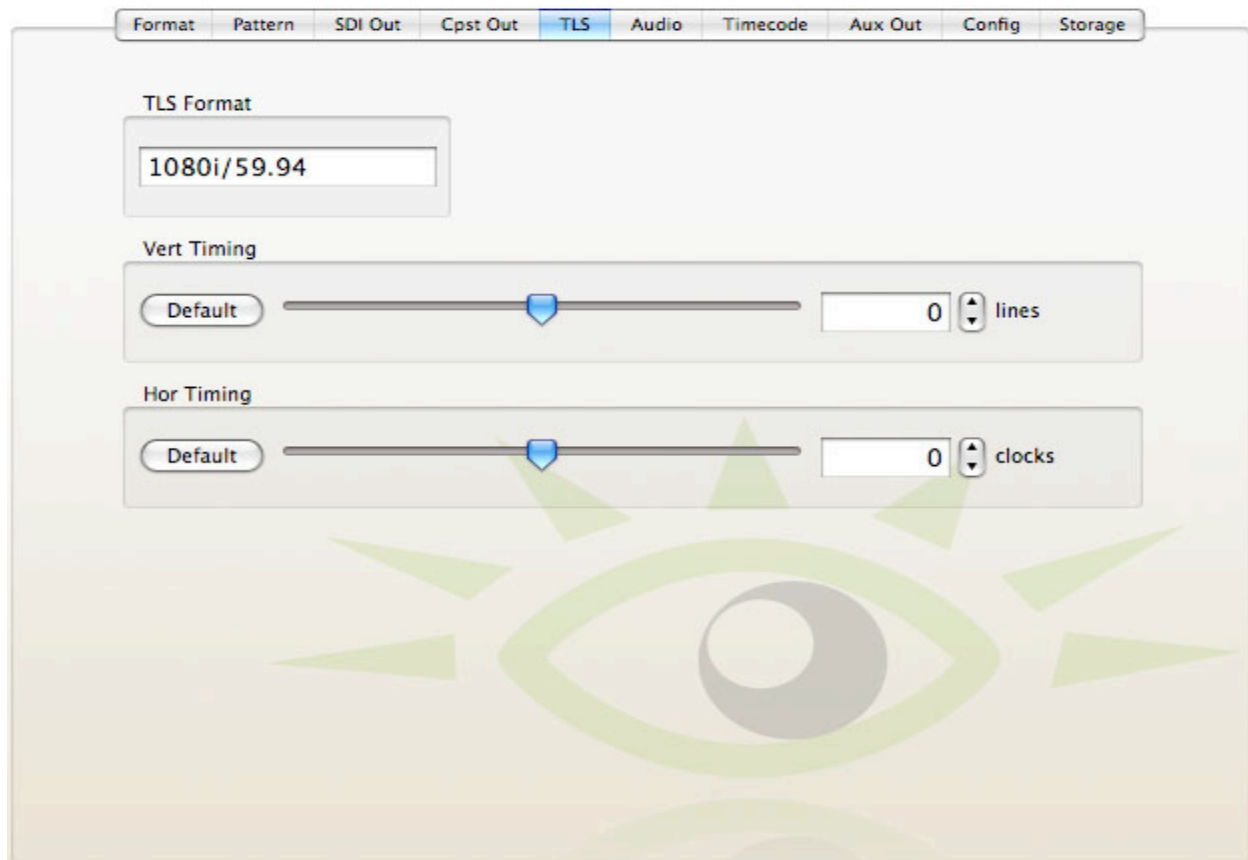

Configuring the Audio Parameters (Audio Menu)

The BrightEye 57's tone generator supports sixteen audio channels. The content of each channel is independently programmable. Choices include adjustable frequency tone generators, tone sweeps, silence, timecode, and audio clip playback from the SD (secure digital) Memory Card. All sixteen of these channels can be embedded in the SDI outputs. Each AES output can select from any of the eight pairs that make up these sixteen channels.

This menu affects the **SDI Out** and **AES 1/2 Out** BNCs.

There are three types of audio output: Embedded, AES (goes to **AES 1/2 Out**) and Analog (output goes to the Analog Audio output).

The **Audio** menu shown below allows you to set the **Channel Number** to select, the **Audio Source**, to make Embedded Audio selections, and to choose the channel for **Analog Out**.


Use the controls to set the following:

- **Chan Number** – Select a channel, 1 through 16, and then use the Audio Source menu to select the desired contents for that channel.
- **Audio Source** – Available selections are:
 - 50 Hz Tone
 - 100 Hz Tone
 - 200 Hz Tone
 - 400 Hz Tone
 - 800 Hz Tone
 - 1 kHz Tone
 - 2 kHz Tone
 - 5 kHz Tone
 - Silence
 - Timecode
 - External AES
 - TSG Audio
- **Embed Grp 1 through 4** – Use the checkbox controls to enable or disable each group.
 - Group 1 includes channels 1/2 and 3/4.
 - Group 2 includes channels 5/6 and 7/8.
 - Group 3 includes channels 9/10 and 11/12.
 - Group 4 includes channels 13/14 and 15/16.

- **Embedding** – Turn embedding on or off. When checked, embedding is on and the green Audio light is illuminated on the BrightEye 57 front panel. When not checked, embedding is off and the green Audio light on the front panel is not illuminated.

- **Analog Out** – Available selections are:

Channels 1/2
Channels 3/4
Channels 5/6
Channels 7/8
Channels 9/10
Channels 11/12
Channels 13/14
Channels 15/16

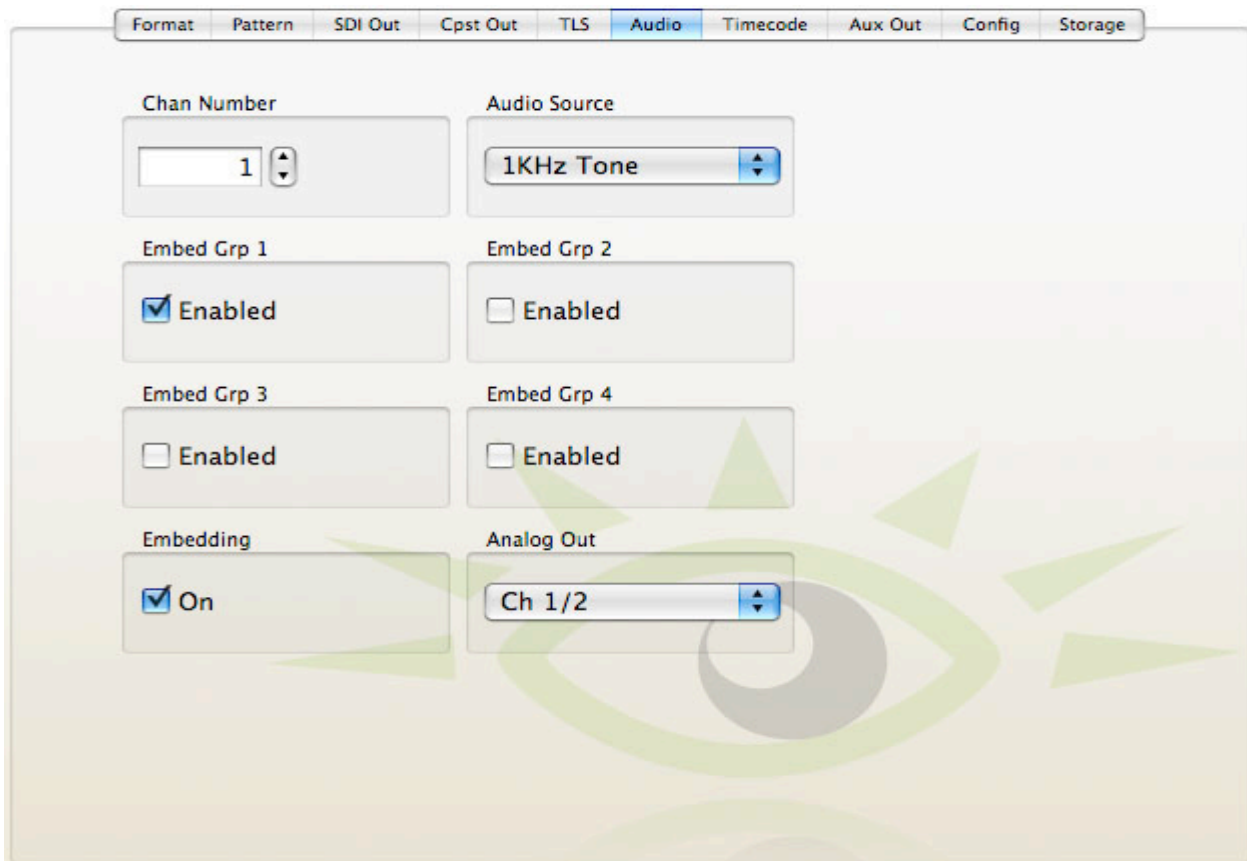

The screenshot shows the 'Audio' configuration tab of the BrightEye 57 interface. The tab is highlighted in blue. The interface includes several controls:


- Chan Number:** A numeric input field set to '1'.
- Audio Source:** A dropdown menu set to '1KHz Tone'.
- Embed Grp 1:** A checkbox labeled 'Enabled' which is checked.
- Embed Grp 2:** A checkbox labeled 'Enabled' which is unchecked.
- Embed Grp 3:** A checkbox labeled 'Enabled' which is unchecked.
- Embed Grp 4:** A checkbox labeled 'Enabled' which is unchecked.
- Embedding:** A checkbox labeled 'On' which is checked.
- Analog Out:** A dropdown menu set to 'Ch 1/2'.

Setting the Timecode Parameters (Timecode Menu)

You can load the Timecode Generator with a preset value through the control system. When a BrightEye 57 powers up, the Timecode Generator starts at 0:0:0. Alternatively, the BrightEye 57 can read VITC present on the reference input. This timecode value will be used continuously by the BrightEye 57's internal generator. When this option is selected, the timecode presented on the many different outputs will all match the timecode on the reference input.

The **Timecode** menu shown below allows you to set the following parameters:

- **Hours** – 1 through 23
- **Minutes** – 1 through 59
- **Seconds** – 1 through 59
- **TCG Mode** – select from these values: Run, Track Ref, Jam!, Hold.
- **Drop Frame** – Select the checkbox to enable Drop Frame (dropping two frames every minute except on every tenth minute) to allow timecode to match a real-time clock.
- **Cpst VITC** – Vertical interval timecode (VITC) can be routed to an analog composite output. Select which lines you want to route to from these menu values: Lines 13, 15; Lines 14, 16; Lines 15, 17; Lines 16, 18; Lines 17, 19; Lines 18, 20.
- **SDI DVITC** – Digital vertical interval timecode (DVITC) can be routed to an SD SDI output. Select which lines you want to route to from these menu values: Lines 13, 15; Lines 14, 16; Lines 15, 17; Lines 16, 18; Lines 17, 19; Lines 18, 20.

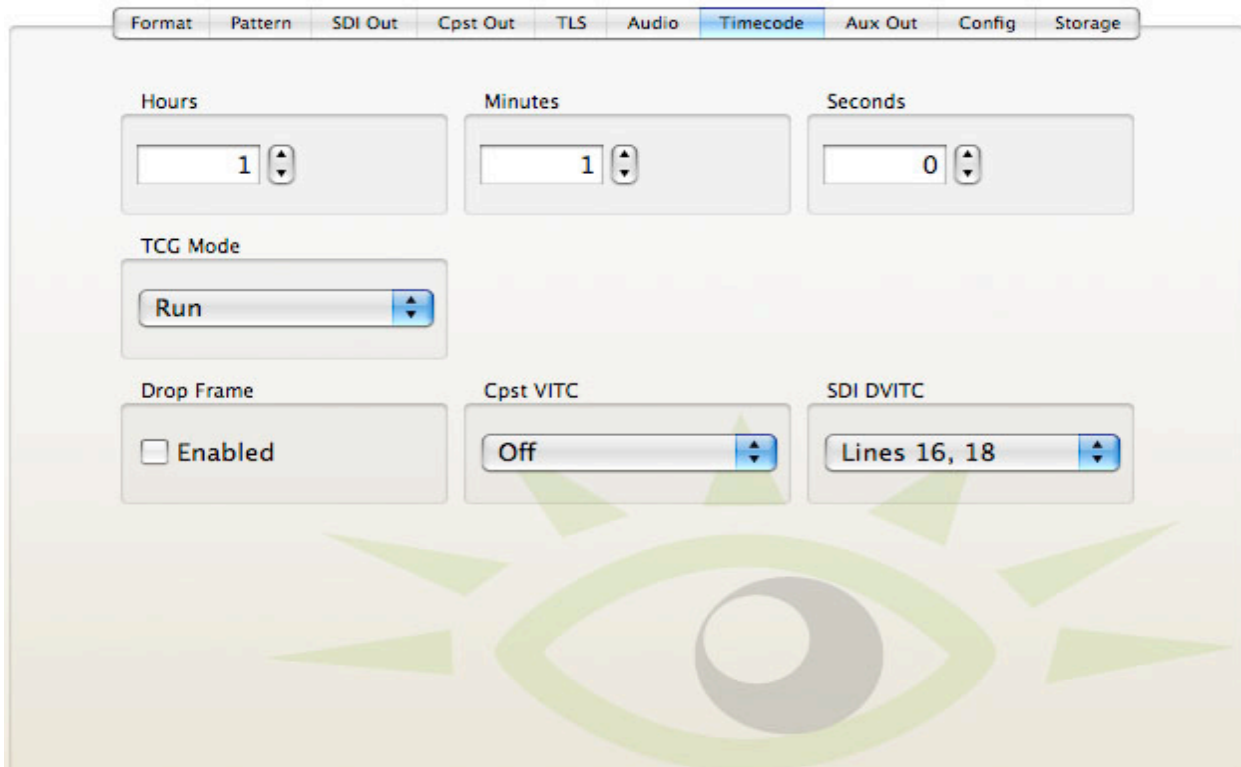

Setting the Output for Programmable Outputs Aux 1, Aux 2, Aux 3 (Aux Out Menu)

The **Aux Out** menu shown below allows you to set the output standards for the Programmable Output **Aux 1, Aux 2 and Aux 3 BNCs**. This menu affects the **Aux 1, Aux 2 and Aux 3 BNCs**.

Use the controls to set the following:

- **Aux 1 OutSel** – Affects Programmable Output **Aux 1 BNC**. Choose from:


- LTC Timecode
- AES Audio 1/2
- AES Audio 3/4
- AES Audio 5/6
- AES Audio 7/8
- AES Audio 9/10
- AES Audio 11/12
- AES Audio 13/14
- AES Audio 15/16
- AES Silence
- Word Clock
- 6 Hz Pulse

- **Aux 2 OutSel** – Affects Programmable Output **Aux 2 BNC**. Choose from:

- LTC Timecode
- AES Audio 1/2
- AES Audio 3/4
- AES Audio 5/6
- AES Audio 7/8
- AES Audio 9/10
- AES Audio 11/12
- AES Audio 13/14
- AES Audio 15/16
- AES Silence
- Word Clock
- 6 Hz Pulse

- **Aux 3 OutSel** – Affects Programmable Output **Aux 3** BNC. Choose from:

LTC Timecode
AES Audio 1/2
AES Audio 3/4
AES Audio 5/6
AES Audio 7/8
AES Audio 9/10
AES Audio 11/12
AES Audio 13/14
AES Audio 15/16
AES Silence
Word Clock
6 Hz Pulse

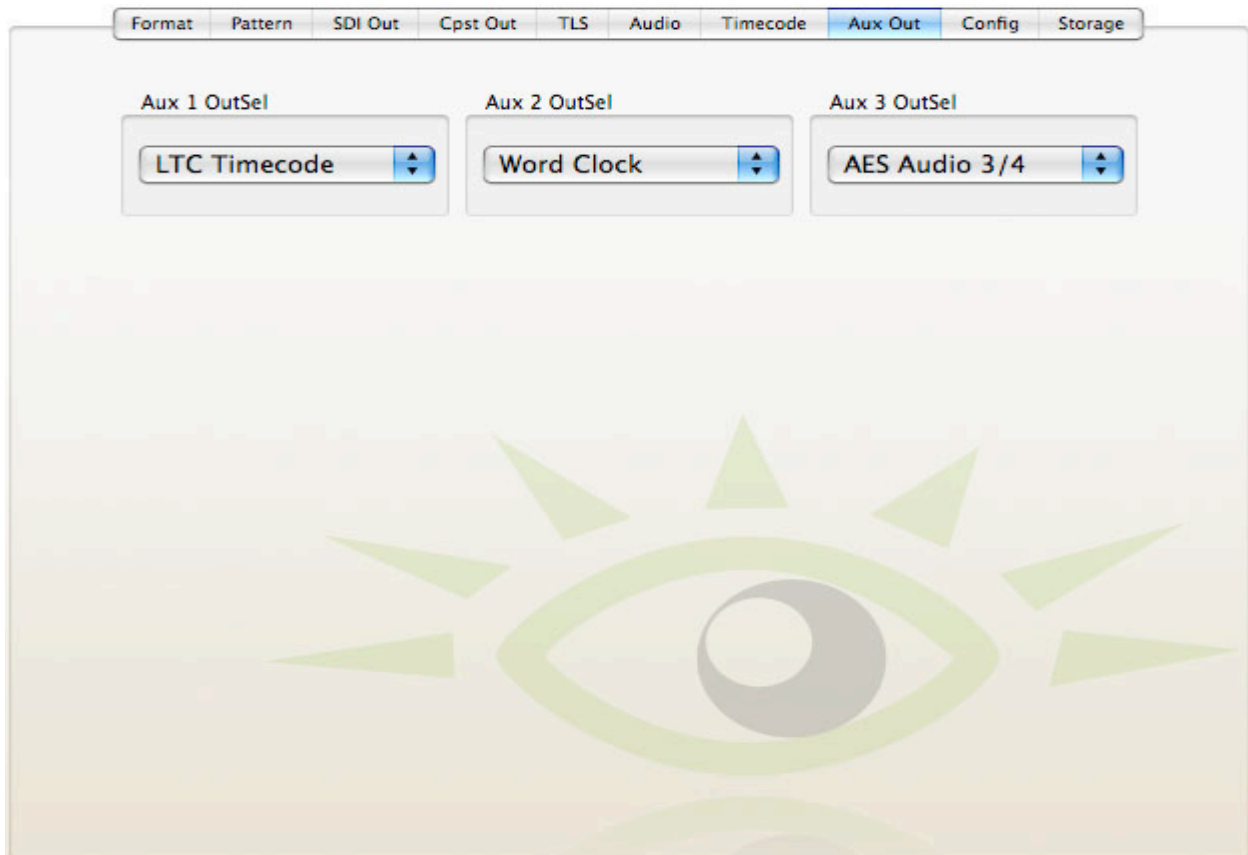


Configuring the Reference Mode, Composite Setup, Digital and Analog Reference Levels (Config Menu)

The BrightEye 57 can lock to an external house reference or it can lock to its own internal precision standard reference. From the **Config Menu**, you can select the overall genlock timing reference, enable or disable Composite Setup, and select levels for Digital and Analog Audio Reference Levels.

Use the controls to set the following:

- **Ref Mode** – Affects which source the BrightEye 57 uses for the overall genlock timing reference. Select **Internal** to lock to the internal precision standard or **Genlock** to lock to the input reference signal. If **Genlock** is selected but no reference signal is connected, BrightEye 57 will free run. When **Internal** is selected, the internal precision standard runs at a 10 MHz accuracy.
- **Reference** – Reports if a reference signal is connected to the **Ref In** BNC.
- **Sync Lock** – Reports the standard the module is locked to. If the module is not locked to a standard, it displays No Lock.
- **Cpst Setup** – Select the Enabled checkbox to enable Composite Setup. Typically this box is checked for Enable.
- **Dig Ref Level** – Select the digital audio reference level. Choices are -20 dBFS and -18 dBFS.
- **Anlg Ref Level** – Select the analog audio reference level. Choices are -10 dB, -6 dB, -4 dB, 0 dB, +4 dB.

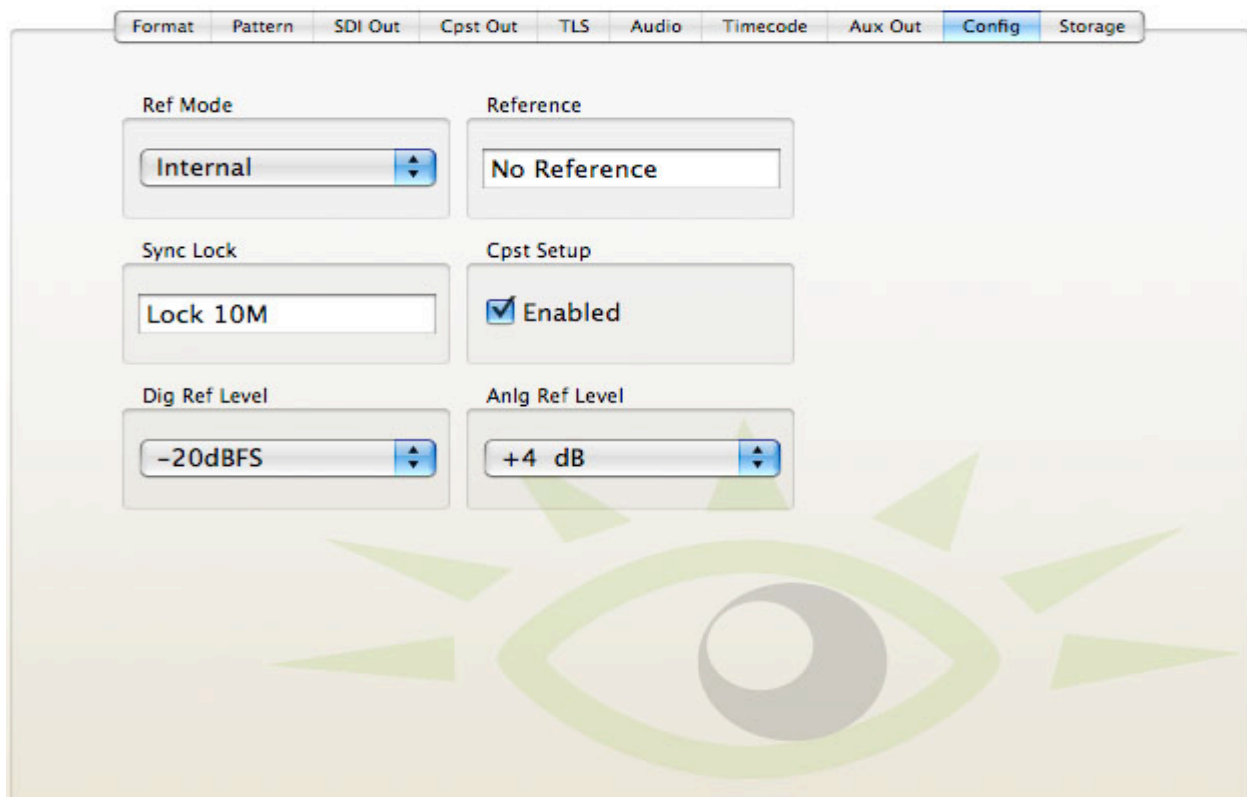


Monitoring SD Card Status and available RAM (Storage Menu)

With the **Storage** menu shown below, you can monitor the status of an SD card and view the amount of available RAM.

- **SD Card Status** – Reflects the status of the Secure Digital Card.
- **RAM Module** – Shows the RAM capacity of the BrightEye 57's generator.

For more information on using the SD Card, see the Pattern Generator software application and user manual.

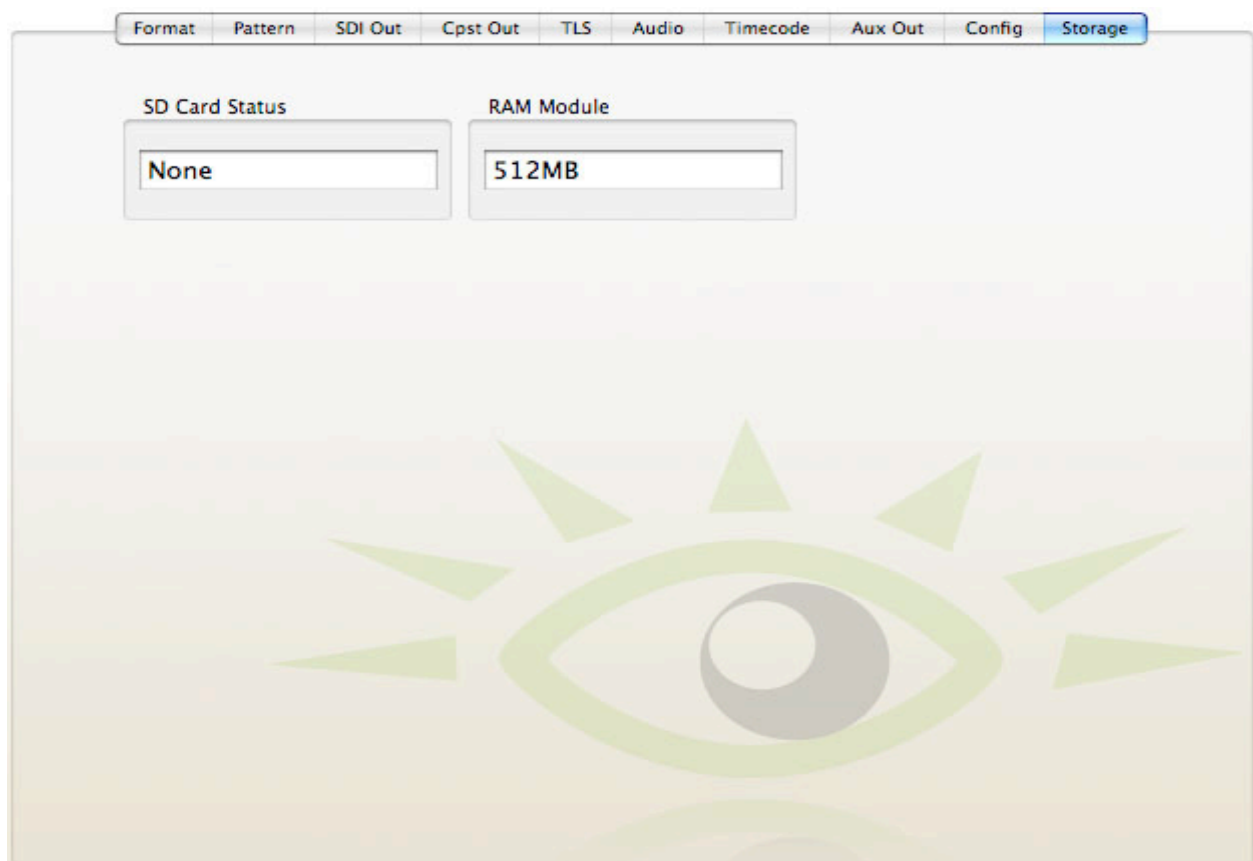

TROUBLESHOOTING

As a troubleshooting aid, the reference signal status and presence, power and CPU status can be easily monitored from the front panel using the front panel indicators.

Refer to the overall troubleshooting tips given below for the BrightEye 57.

No signal output

- Check that the expected signal output matches the output selected in the **Format Menu**.
- Check the configuration of Ref Mode in the **Config Menu**. Make sure that the appropriate setting (Internal or Genlock) is selected for the expected signal output.

You may also refer to the technical support section of the Ensemble Designs web site for the latest information on your equipment at the URL below:

<http://www.ensembledesigns.com/support>

SOFTWARE UPDATING

Software upgrades for BrightEyes are available at:

<http://www.enssembledesigns.com/support/brighteye-support/>

Use BrightEye Mac or PC software to install the software update into your BrightEye.

WARRANTY AND FACTORY SERVICE

Warranty

This module is covered by a five year limited warranty, as stated in the main Preface of this manual. If you require service (under warranty or not), please contact Ensemble Designs and ask for customer service before you return the unit. This will allow the service technician to provide any other suggestions for identifying the problem and recommend possible solutions.

Factory Service

If you return equipment for repair, please get a Return Material Authorization Number (RMA) from the factory first.

Ship the product and a written description of the problem to:

Ensemble Designs, Inc.
Attention: Customer Service RMA #####
870 Gold Flat Rd.
Nevada City, CA. 95959 USA

(530) 478-1830
Fax: (530) 478-1832

service@enssembledesigns.com

<http://www.enssembledesigns.com>

Be sure to put your RMA number on the outside of the box.

SPECIFICATIONS

Reference Input

Number	One
Signal Type	1V P-P PAL, NTSC, 10 MHz or HD Tri-Level Sync
Return Loss	>40 dB DC to 5.5 MHz

Composite Output

Number	Two
Signal Type	NTSC / PAL
Impedance	75 Ω
Return Loss	>40 dB DC to 5.5 MHz
Frequency Response	-0.1 dB 10 KHz to 5.0 MHz
Output DC	± 50 mV
K Factor	<1.0%
Differential Phase	<1.0 degree
SCH Phase	± 5 degrees

Accuracy and Timing Stability

Internal	TCXO
PAL Fsc	4.43361875 MHz +/- 1 Hz
NTSC Fsc	3.579545 MHz +/- 1 Hz
601 Fs	27.000000 MHz +/- 5 Hz
Long Term Drift	<1 ppm/year
Analog Jitter	<1 ns
Digital Jitter	<0.2 UI (0.13 UI typical)

Serial Digital Output

Number	Two
Signal Type	270 Mb/s SD Serial Digital (SMPTE 259M) 1.485 Gb/s HD Serial Digital (SMPTE 274M, 292M or 296M) 2.97 Gb/s HD Serial Digital (SMPTE 424M, 425M)
Return Loss	>15 dB for 270 Mb/s >15 dB for 1.485 Gb/s >10 dB for 2.97 Gb/s
Max Cable Length	300 meters for 270 Mb/s 100 meters for 1.485 Gb/s 70 meters for 2.97 Gb/s (Belden 1694A)

Tri-Level Sync Output

Number	Two, 75 Ω
Output DC	± 50 mV
Return Loss	>30 dB to 30 MHz

Standards Supported

1080i (SMPTE 274M -4, 5, 6) 50, 59.94 or 60 Hz
720p (SMPTE 296M -1, 2, 3) 50, 59.94 or 60 Hz
1080p (SMPTE 274M -9, 10, 11) 23.98, 24, 25 Hz
1080sF (RP211 -14, 15, 16) 23.98, 24, 25 Hz
3 Gb/s Level A or Level B (SMPTE 424M, 425M)
625i 50, 525i 59.94, Composite PAL, NTSC

AES Audio Output

Number	One
Type	AES3id, 1 KHz tone or silence
Resolution	24 bit

Analog Audio Output

Number	One stereo pair or two mono
Type	1 KHz tone or silence
Impedance	30 Ω , balanced
Reference Level	-10 to + 4 dBu, adjustable

Programmable Outputs

Number	Three
Type	Selectable between AES, LTC, VITC, Word Clock or 6 Hz Pulse
Impedance	75 Ω

Flash Memory

Number	One
Type	Secure Digital SD Flash Memory Card
Size	1 MB card included

General Specifications

Size	5.625" W x 1.7" H x 5.5" D (143 mm x 40 mm x 140 mm) including connectors
Power	12 volts, 12 watts (100-230 VAC modular power supply not included)
Temperature Range	0 to 40° C ambient
Relative Humidity	0 to 95%, noncondensing

Due to ongoing product development, all specifications are subject to change.

GLOSSARY

This is a brief glossary of commonly used terms associated with this product.

AES/EBU

The digital audio standard defined as a joint effort of the Audio Engineering Society and the European Broadcast Union. AES/EBU or AES3 describes a serial bitstream that carries two audio channels, thus an AES stream is a stereo pair. The AES/EBU standard covers a wide range of sample rates and quantizations (bit depths.) In television systems, these will generally be 48 kHz and either 20 or 24 bits.

Bandwidth

Strictly speaking, this refers to the range of frequencies (i.e. the width of the band of frequency) used by a signal, or carried by a transmission channel. Generally, wider bandwidth will carry and reproduce a signal with greater fidelity and accuracy.

Beta

Sony Beta SP video tape machines use an analog component format that is similar to SMPTE, but differs in the amplitude of the color difference signals. It may also carry setup on the luminance channel.

Blanking

The Horizontal and Vertical blanking intervals of a television signal refer to the time periods between lines and between fields. No picture information is transmitted during these times, which are required in CRT displays to allow the electron beam to be repositioned for the start of the next line or field. They are also used to carry synchronizing pulses which are used in transmission and recovery of the image. Although some of these needs are disappearing, the intervals themselves are retained for compatibility purposes. They have turned out to be very useful for the transmission of additional content, such as teletext and embedded audio.

CAV

Component Analog Video. This is a convenient shorthand form, but it is subject to confusion. It is sometimes used to mean ONLY color difference component formats (SMPTE or Beta), and other times to include RGB format. In any case, a CAV signal will always require 3 connectors – either Y/R-Y/B-Y, or R/G/B.

Checkfield

A Checkfield signal is a special test signal that stresses particular aspects of serial digital transmission. The performance of the Phase Locked-Loops (PLLs) in an SDI receiver must be able to tolerate long runs of 0's and 1's. Under normal conditions, only very short runs of these are produced due to a scrambling algorithm that is used. The Checkfield, also referred to as the Pathological test signal, will "undo" the scrambling and cause extremely long runs to occur. This test signal is very useful for testing transmission paths.

Chroma

The color or chroma content of a signal, consisting of the hue and saturation of the image. See also Color Difference.

Component

In a component video system, the totality of the image is carried by three separate but related components. This method provides the best image fidelity with the fewest artifacts, but it requires three independent transmission paths (cables). The commonly used component formats are Luminance and Color Difference (Y/Pr/Pb), and RGB. It was far too unwieldy in the early days of color television to even consider component transmission.

Composite

Composite television dates back to the early days of color transmission. This scheme encodes the color difference information onto a color subcarrier. The instantaneous phase of the subcarrier is the color's hue, and the amplitude is the color's saturation or intensity. This subcarrier is then added onto the existing luminance video signal. This trick works because the subcarrier is set at a high enough frequency to leave spectrum for the luminance information. But it is not a seamless matter to pull the signal apart again at the destination in order to display it or process it. The resultant artifacts of dot crawl (also referred to as chroma crawl) are only the most obvious result. Composite television is the most commonly used format throughout the world, either as PAL or NTSC. It is also referred to as Encoded video.

Color Difference

Color Difference systems take advantage of the details of human vision. We have more acuity in our black and white vision than we do in color. This means that we need only the luminance information to be carried at full bandwidth, we can scrimp on the color channels. In order to do this, RGB information is converted to carry all of the luminance (Y is the black and white of the scene) in a single channel. The other two channels are used to carry the "color difference". Noted as B-Y and R-Y, these two signals describe how a particular pixel "differs" from being purely black and white. These channels typically have only half the bandwidth of the luminance.

Decibel (dB)

The decibel is a unit of measure used to express the ratio in the amplitude or power of two signals. A difference of 20 dB corresponds to a 10:1 ratio between two signals, 6 dB is approximately a 2:1 ratio. Decibels add while the ratios multiply, so 26 dB is a 20:1 ratio, and 14 dB is a 5:1 ratio. There are several special cases of the dB scale, where the reference is implied. Thus, dBm refers to power relative to 1 milliwatt, and dBu refers to voltage relative to .775V RMS. The original unit of measure was the Bel (10 times bigger), named after Alexander Graham Bell.

dBFS

In Digital Audio systems, the largest numerical value that can be represented is referred to as Full Scale. No values or audio levels greater than FS can be reproduced because they would be clipped. The nominal operating point (roughly corresponding to 0 VU) must be set below FS in order to have headroom for audio peaks. This operating point is described relative to FS, so a digital reference level of -20 dBFS has 20 dB of headroom before hitting the FS clipping point.

EDH

Error Detection and Handling is a method to verify proper reception of an SDI or HD-SDI signal at the destination. The originating device inserts a data packet in the vertical interval of the SDI signal and every line of the HD signal which contains a checksum of the entire video frame. This checksum is formed by adding up the numerical values of all of the samples in the frame, using a complex formula. At the destination this same formula is applied to the incoming video and the resulting value is compared to the one included in the transmission. If they match, then the content has all arrived with no errors. If they don't, then an error has occurred.

Embedded Audio

Digital Audio can be carried along in the same bitstream as an SDI or HD-SDI signal by taking advantage of the gaps in the transmission which correspond to the horizontal and vertical intervals of the television waveform. This technique can be very cost effective in transmission and routing, but can also add complexity to signal handling issues because the audio content can no longer be treated independently of the video.

Frame Sync

A Frame Synchronizer is used to synchronize the timing of a video signal to coincide with a timing reference (usually a color black signal that is distributed throughout a facility). The synchronizer accomplishes this by writing the incoming video into a frame buffer memory under the timing direction of the sync information contained in that video. Simultaneously the memory is being read back by a timing system that is genlocked to a house reference. As a result, the timing or alignment of the video frame can be adjusted so that the scan of the upper left corner of the image is happening simultaneously on all sources. This is a requirement for both analog and digital systems in order to perform video effects or switch glitch-free in a router. Frame synchronization can only be performed within a single television line standard. A synchronizer will not convert an NTSC signal to a PAL signal, it takes a standards converter to do that.

Frequency Response

A measurement of the accuracy of a system to carry or reproduce a range of signal frequencies. Similar to Bandwidth.

IEC

The International Electrotechnical Commission provides a wide range of worldwide standards. They have provided standardization of the AC power connection to products by means of an IEC line cord. The connection point uses three flat contact blades in a triangular arrangement, set in a rectangular connector. The IEC specification does not dictate line voltage or frequency. Therefore, the user must take care to verify that a device either has a universal input (capable of 90 to 230 volts, either 50 or 60 Hz), or that a line voltage switch, if present, is set correctly.

Interlace

Human vision can be fooled to see motion by presenting a series of images, each with a small change relative to the previous image. In order to eliminate the flicker, our eyes need to see more than 30 images per second. This is accomplished in television systems by dividing the lines that make up each video frame (which run at 25 or 30 frames per second) into two fields. All of the odd-numbered

lines are transmitted in the first field, the even-numbered lines are in the second field. In this way, the repetition rate is 50 or 60 Hz, without using more bandwidth. This trick has worked well for years, but it introduces other temporal artifacts. Motion pictures use a slightly different technique to raise the repetition rate from the original 24 frames that make up each second of film—they just project each one twice.

IRE

Video level is measured on the IRE scale, where 0 IRE is black, and 100 IRE is full white. The actual voltages that these levels correspond to can vary between formats.

ITU-R 601

This is the principal standard for standard definition component digital video. It defines the luminance and color difference coding system that is also referred to as 4:2:2. The standard applies to both PAL and NTSC derived signals. They both will result in an image that contains 720 pixels horizontally, with 486 vertical pixels in NTSC, and 576 vertically in PAL. Both systems use a sample clock rate of 27 Mhz, and are serialized at 270 Mb/s.

Jitter

Serial digital signals (either video or audio) are subject to the effects of jitter. This refers to the instantaneous error that can occur from one bit to the next in the exact position each digital transition. Although the signal may be at the correct frequency on average, in the interim it varies. Some bits come slightly early, other come slightly late. The measurement of this jitter is given either as the amount of time uncertainty or as the fraction of a bit width. For 270 Mb/s video, the allowable jitter is 740 picoseconds, or 0.2 UI (Unit Interval – one bit width).

Luminance

The “black & white” content of the image. Human vision had more acuity in luminance, so television systems generally devote more bandwidth to the luminance content. In component systems, the luminance is referred to as Y.

Multi-mode

Multi-mode fibers have a larger diameter core (either 50 or 62.5 microns), and a correspondingly larger aperture. It is much easier to couple light energy into a multimode fiber, but internal reflections will cause multiple “modes” of the signal to propagate down the fiber. This will degrade the ability of the fiber to be used over long distances.

See also Single mode.

NTSC

The color television encoding system used in North America was originally defined by the National Television Standards Committee. This American standard has also been adopted by Canada, Mexico, Japan, Korea, and Taiwan. (This standard is referred to disparagingly as Never Twice Same Color.)

Optical

An optical interface between two devices carries data by modulating a light source. This light source is typically a laser or laser diode (similar to an LED) which is turned on and off at the bitrate of the datastream. The light is carried from one device to another through a glass fiber. The fiber's core acts as a waveguide or lightpipe to carry the light energy from one end to another. Optical transmission has two very significant advantages over metallic copper cables. Firstly, it does not require that the two endpoint devices have any electrical connection to each other. This can be very advantageous in large facilities where problems with ground loops appear. And secondly, and most importantly, an optical interface can carry a signal for many kilometers or miles without any degradation or loss in the recovered signal. Copper is barely useful at distances of just 1000 feet.

Oversampling

A technique to perform digital sampling at a multiple of the required sample rate. This has the advantage of raising the Nyquist Rate (the maximum frequency which can be reproduced by a given sample rate) much higher than the desired passband. this allows more easily realized anti-aliasing filters.

PAL

During the early days of color television in North America, European broadcasters developed a competing system called Phase Alternation by Line. This slightly more complex system is better able to withstand the differential gain and phase errors that appear in amplifiers and transmission systems. Engineers at the BBC claim that it stands for Perfection At Last.

Progressive

An image scanning technique which progresses through all of the lines in a frame in a single pass. Computer monitors all use progressive displays. This contrasts to the interlace technique common to television systems.

Return Loss

An idealized input or output circuit will exactly match its desired impedance (generally 75 ohms) as a purely resistive element, with no reactive (capacitive or inductive elements). In the real world we can only approach the ideal. So our real inputs and outputs will have some capacitance and inductance. This will create impedance matching errors, especially at higher frequencies. The Return Loss of an input or output measures how much energy is returned (reflected back due to the impedance mismatch). For digital circuits, a return loss of 15 dB is typical. This means that the energy returned is 15 dB less than the original signal. In analog circuits, a 40 dB figure is expected.

RGB

RGB systems carry the totality of the picture information as independent Red, Green, and Blue signals. Television is an additive color system, where all three components add to produce white. Because the luminance (or detail) information is carried partially in each of the RGB channels, all three must be carried at full bandwidth in order to faithfully reproduce an image.

ScH Phase

Used in composite systems, ScH Phase measures the relative phase between the leading edge of sync on line 1 of field 1 and a continuous subcarrier sinewave. Due to the arithmetic details of both PAL and NTSC, this relationship is not the same at the beginning of each frame. In PAL, the pattern repeats every 4 frames (8 fields) which is also known as the Bruch Blanking sequence. In NTSC, the repeat is every 2 frames (4 fields). This creates enormous headaches in editing systems and the system timing of analog composite facilities.

SDI

Serial Digital Interface. This term refers to inputs and outputs of devices that support serial digital component video. This generally means standard definition at 270 Mb/s. The use of "HD-SDI" is beginning to appear to indicate High Definition Serial Digital video at 1.485 Gb/s.

SMPTE

The Society of Motion Picture and Television Engineers is a professional organization which has done tremendous work in setting standards for both the film and television industries. The term "SMPTE" is also shorthand for one particular component video format - luminance and color difference.

Single mode

A Single mode (or monomode) optical fiber carries an optical signal on a very small diameter (9 micron) core surrounded with cladding. The small diameter means that no internally reflected lightwaves will be propagated. Thus only the original "mode" of the signal passes down the fiber. A single mode fiber used in an optical SDI system can carry a signal for up to 20 kilometers. Single mode fibers require particular care in their installation due to the extremely small optical aperture that they present at splice and connection points.

See also Multi-mode.

TBC

A Time Base Corrector is a system to reduce the Time Base Error in a signal to acceptable levels. It accomplishes this by using a FIFO (First In, First Out) memory. The incoming video is written into the memory using its own jittery timing. This operation is closely associated with the actual digitization of the analog signal because the varying position of the sync timing must be mimicked by the sampling function of the analog to digital converter. A second timing system, genlocked to a stable reference, is used to read the video back out of the memory. The memory acts as a dynamically adjusting delay to smooth out the imperfections in the original signal's timing. Very often a TBC will also function as a Frame Synchronizer.

See also: Frame Sync.

Time Base Error

Time base error is present when there is excessive jitter or uncertainty in the line to line output timing of a video signal. This is commonly associated with playback from video tape recorders, and is particularly severe with consumer type heterodyne systems like VHS. Time base error will render a signal unusable for broadcast or editing purposes.

Tri Level Sync

An analog sync reference signal that is used in High Definition systems. Tri Level Sync is constructed with three signal levels, the sync pulses extend above and below a mid-level average voltage (the blanking level). Unlike conventional analog sync which is bi-level, the proper 50% pickoff point is already identified in Tri Level Sync. This contributes to lower jitter in digital systems.

YUV

Strictly speaking, YUV does not apply to component video. The letters refer to the Luminance (Y), and the U and V encoding axes using in the PAL composite system. Since the U axis is very close to the B-Y axis, and the V axis is very close to the R-Y axis, YUV is often used as a sort of shorthand for the more long-winded "Y/R-Y/B-Y".

Y/Cr/Cb

In digital component video, the luminance component is Y, and the two color difference signals are Cr (R-Y) and Cb (B-Y).

Y/Pr/Pb

In analog component video, the image is carried in three components. The luminance is Y, the R-Y color difference signal is Pr, and the B-Y color difference signal is Pb.